









WESTMINSTER
1990








3x3.6m






User Manual

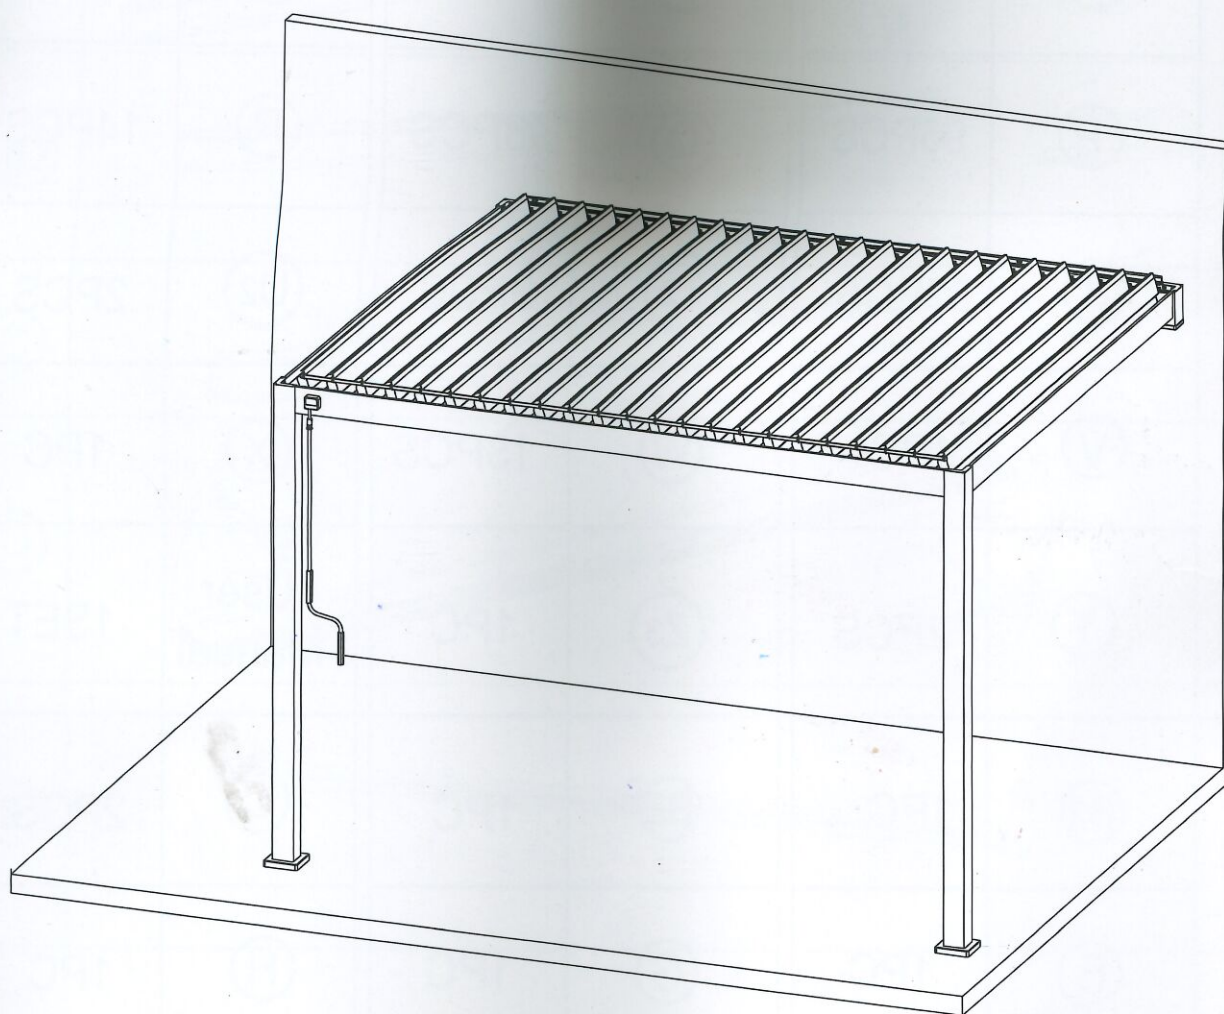

	REF	QTY	REF	QTY	REF	QTY
Carton 1/4	Ⓐ	2PCS	Ⓐ2	2PCS	Ⓘ	2PCS
	Ⓙ	2PCS	Ⓚ	47PCS	Ⓛ	1PC
	Ⓜ	48PCS	Ⓝ	4PCS	Ⓞ	12PCS
	Ⓟ	96PCS	Ⓠ	96PCS	Ⓡ	14PCS
	Ⓢ	27PCS	Ⓣ2	16PCS	Ⓤ2	2PCS
	Ⓥ	1PC	Ⓦ	13PCS	Ⓧ	1PC
	Ⓨ	2PCS	Ⓩ3	1PC	User Manual	1SET
Carton 2/4	Ⓑ1	1PC	Ⓑ2	1PC	ⓒ	2PCS
	Ⓔ	1PC	Ⓖ	1PC	ⓗ	1PC
Carton 3/4	Ⓓ	12PCS				
Carton 4/4	Ⓓ	11PCS				

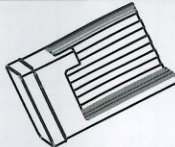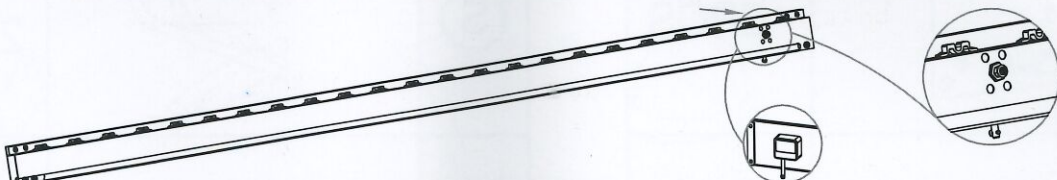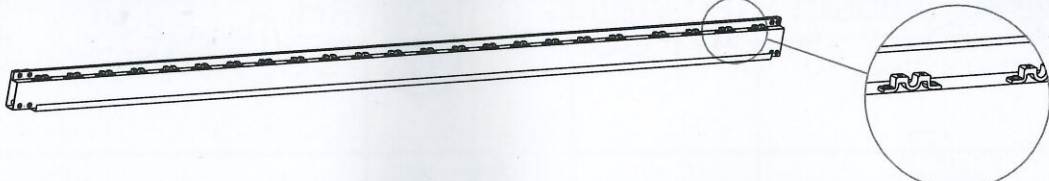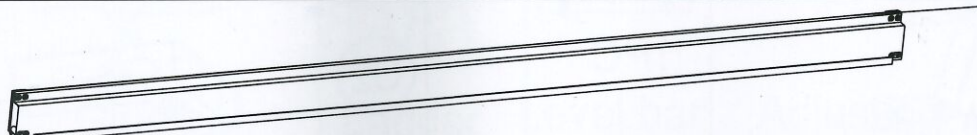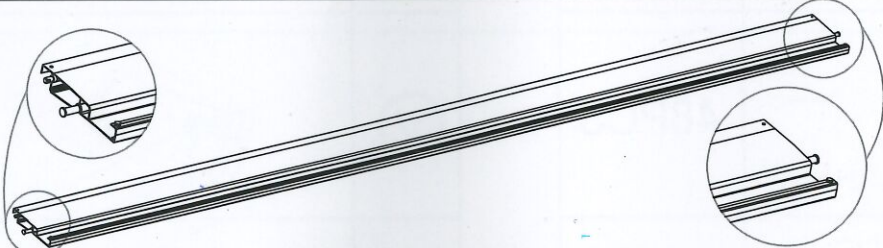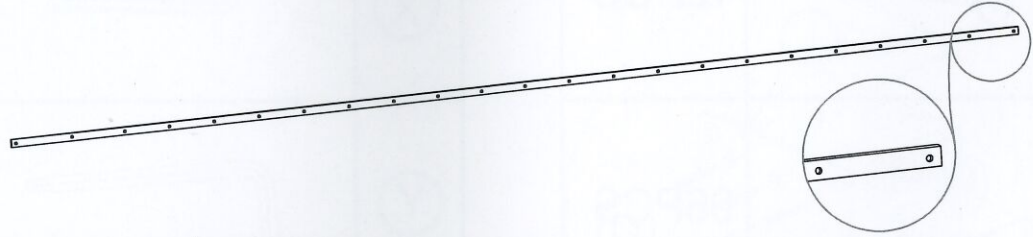REF	PICTURE	QTY
(A)		2PCS
(A2)		2PCS
(B1)		1PC
(B2)		1PC
(C)		2PCS
(D)		23PCS
(E)		1PC
(G)		1PC
(H)		1PC

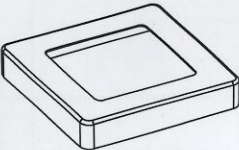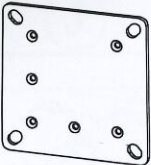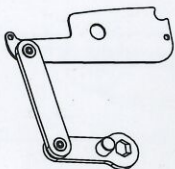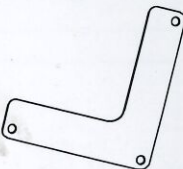REF	PICTURE	QTY
I		2PCS
J		2PCS
K		47PCS
L		1PC
M		48PCS
N		4PCS
O		12PCS
P	 M5x12mm	96PCS
Q	 4.2x25mm	96PCS

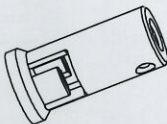REF	PICTURE	QTY
R	 5.5x19mm	14PCS
S		27PCS
T2		16PCS
U2		2PCS
V		1PC
W		13PCS
X		1PC
Y		2PCS
Z3		1PC


Warning

In snow season or in case of snow forecast open up your shutters in vertical position to avoid any damaging on your pergola.

What you need?



Glove




Knife



Hammer




Safety hat

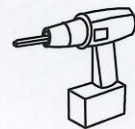

Electric screw driver



Tapeline



Glue gun



Ladder




Level bar





Adjusting wrench

1

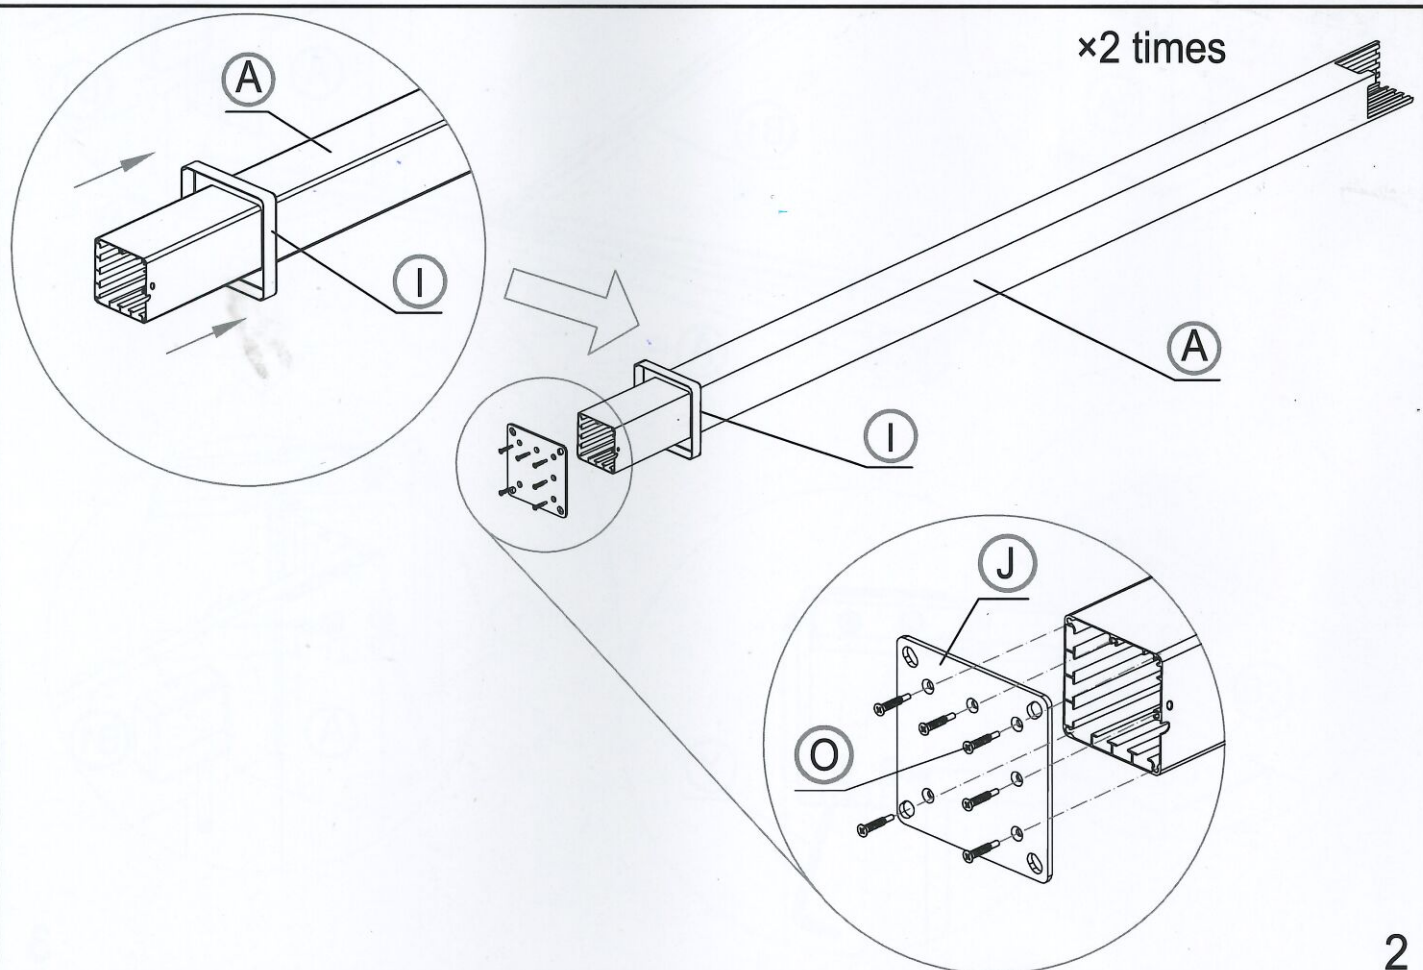


2

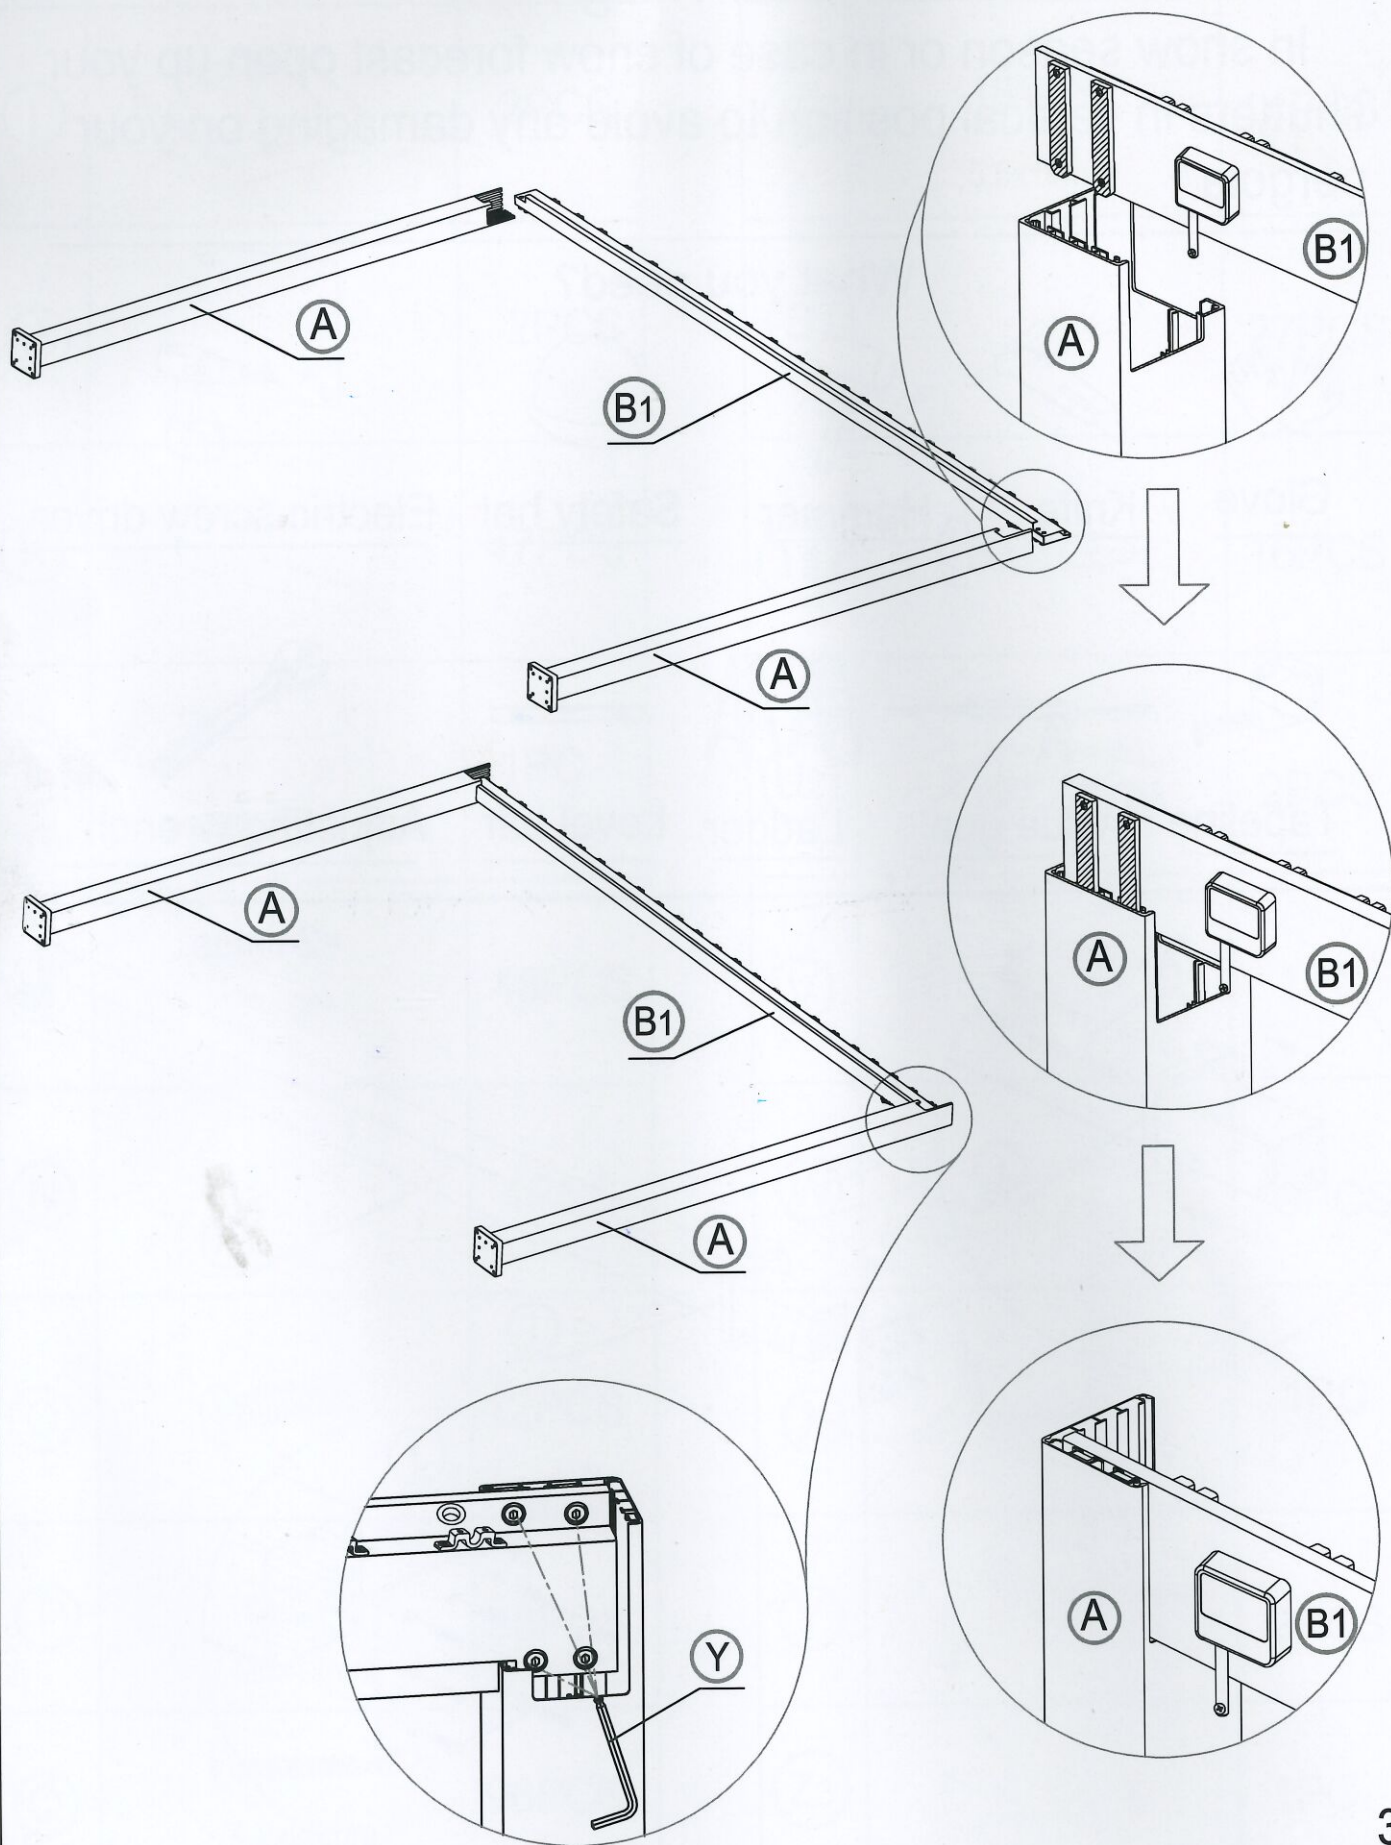


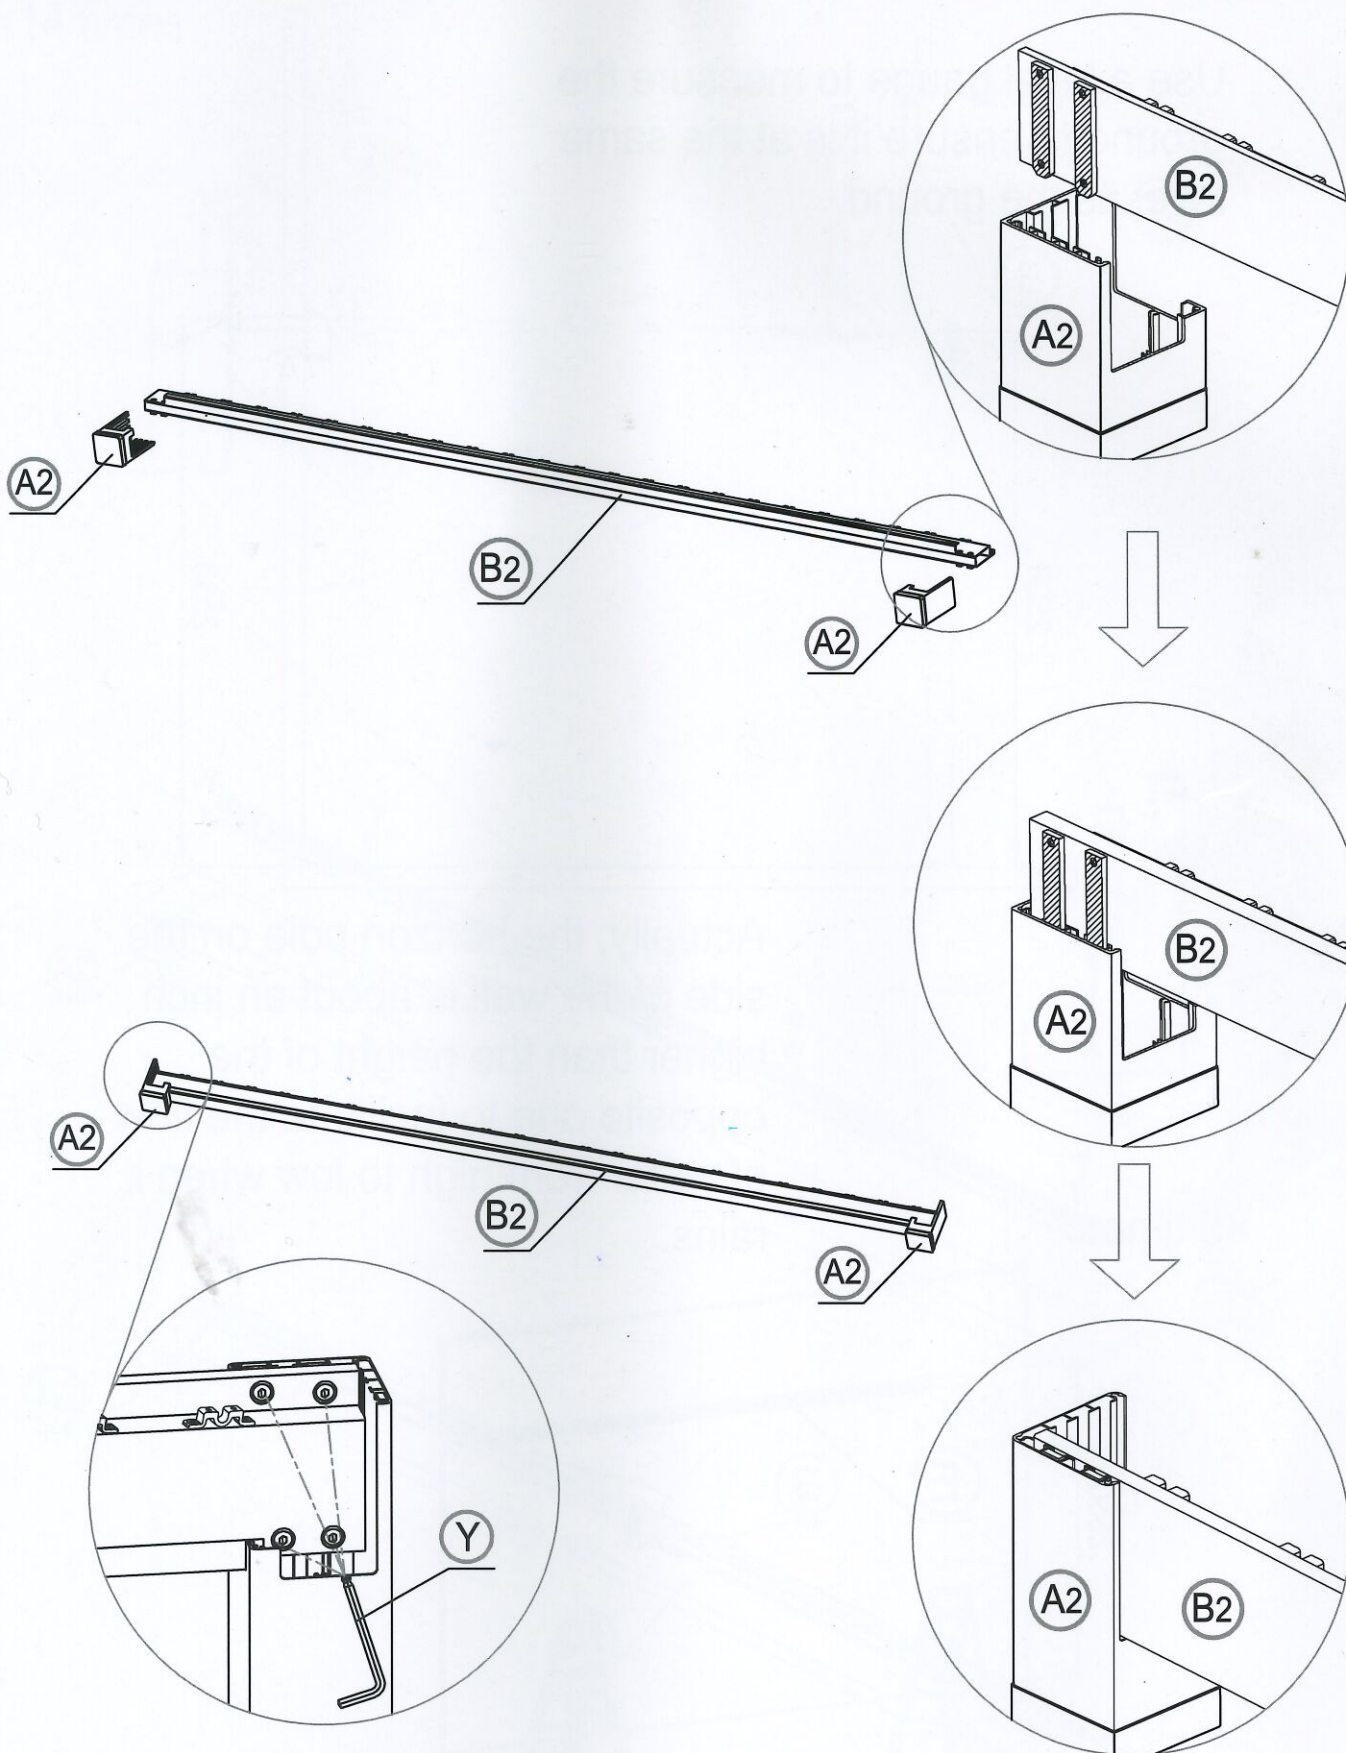


Use a level gauge to measure the ground to ensure it is at the same level as the ground.

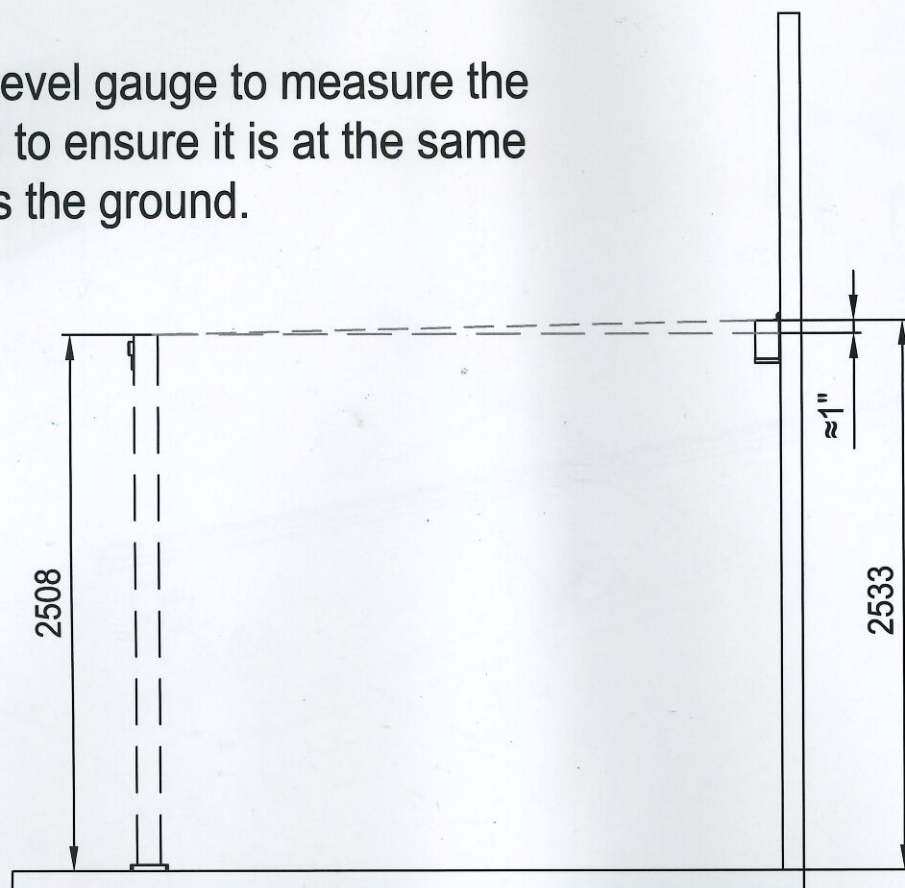








Actually, the horizon pole on the side of the wall is about an inch higher than the height of the opposite one to facilitate the flow of water from high to low when it rains.








×5 times


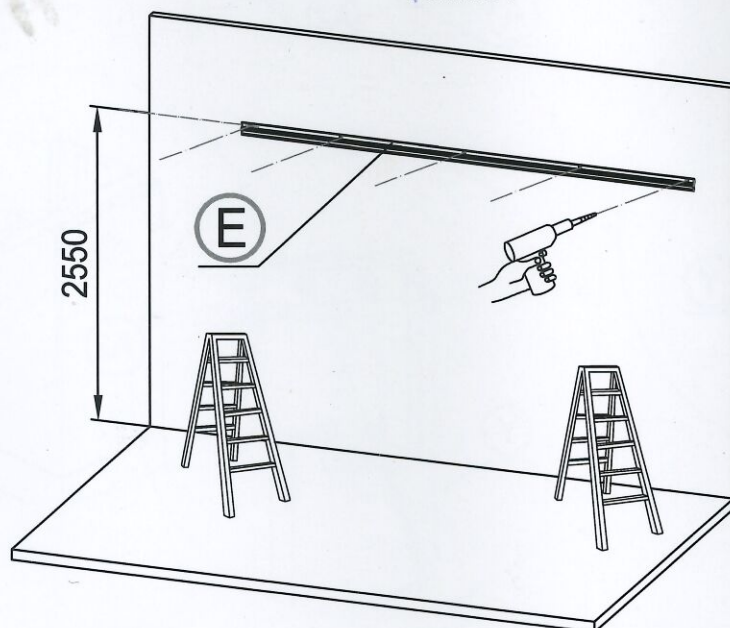








×14 times

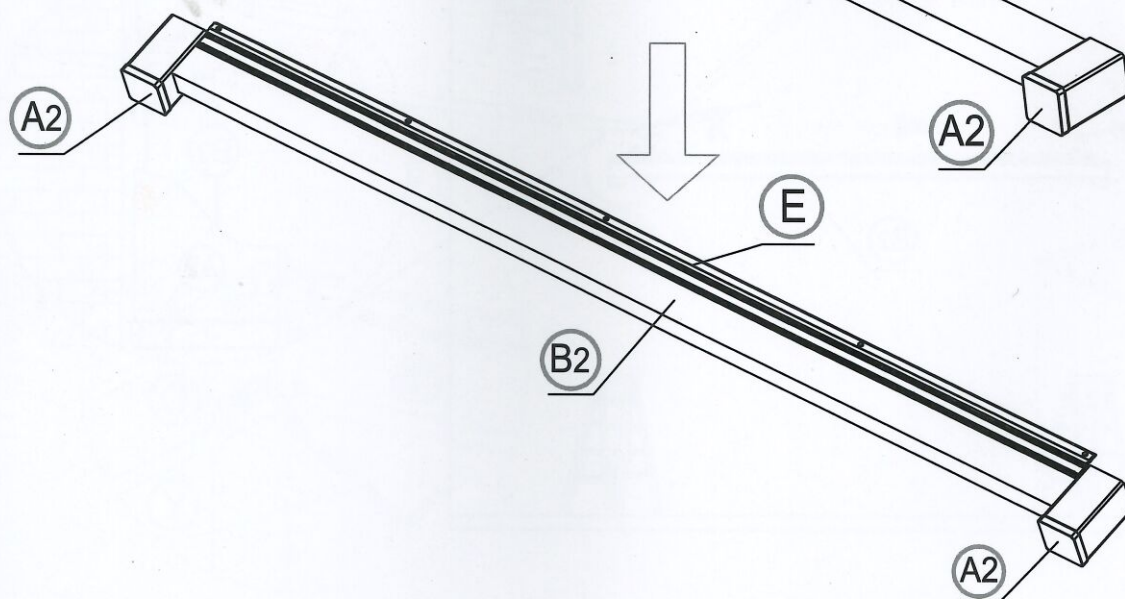

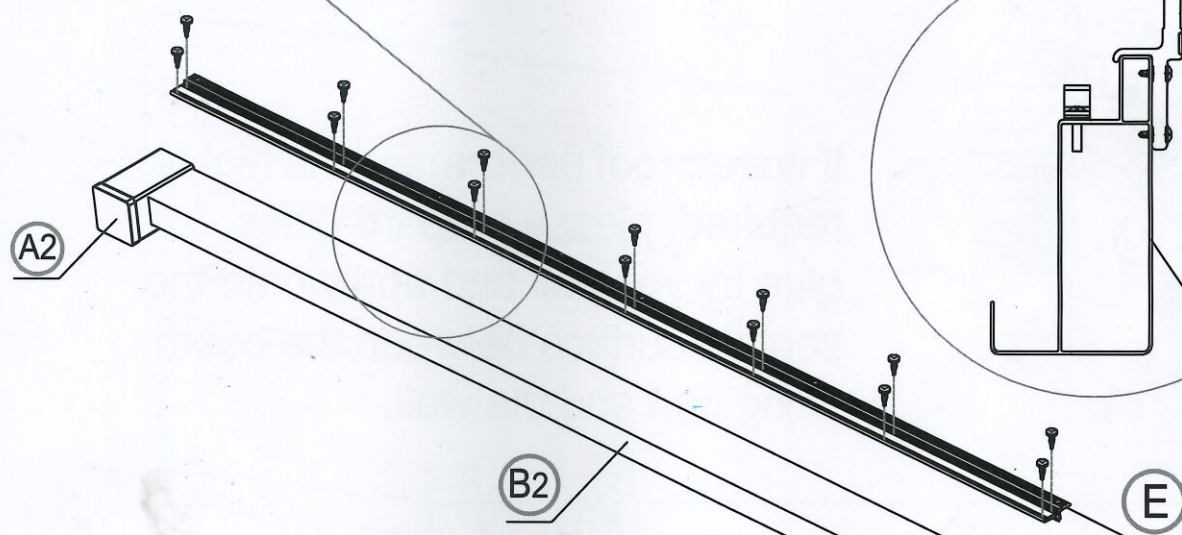
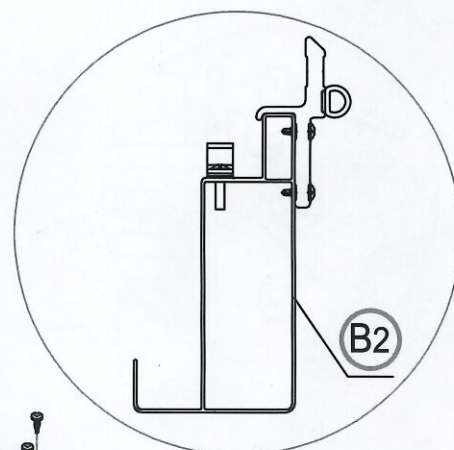
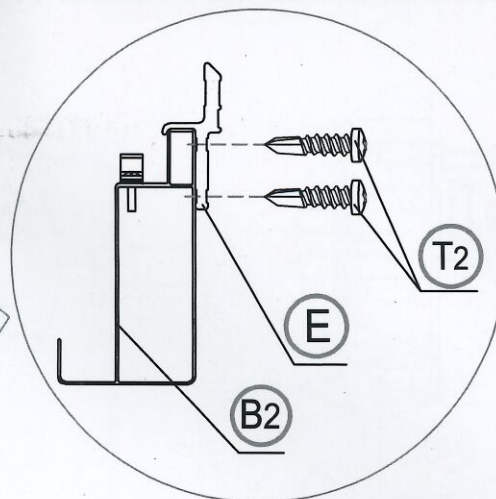

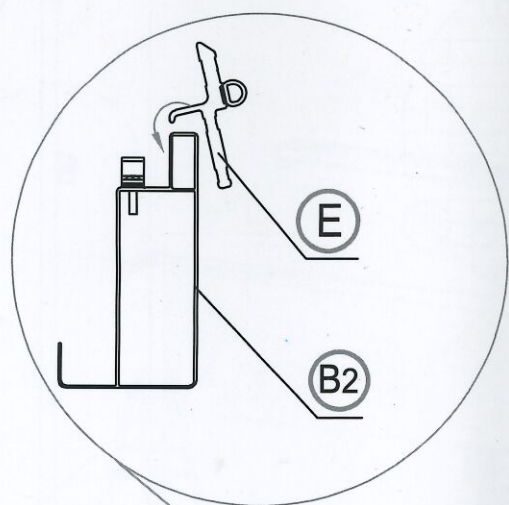




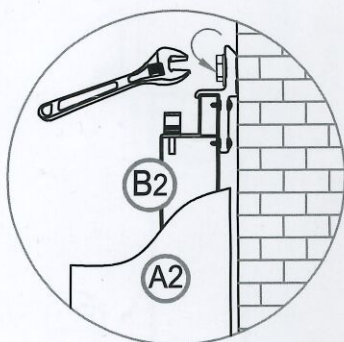

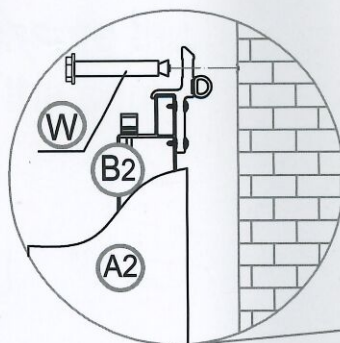

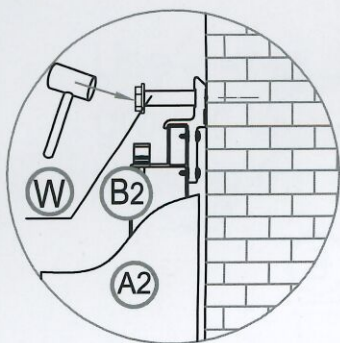










If waterproof performance is highly required, please prepare glass glue by yourself and apply onto the contact surface between the beam fixing part and the wall.

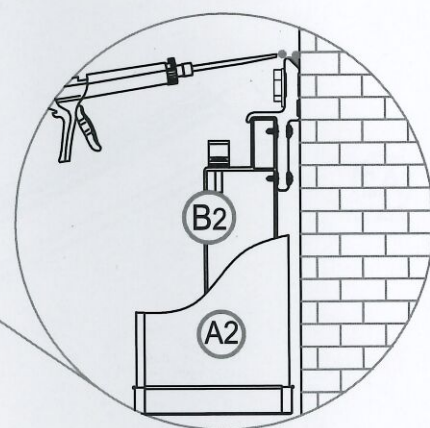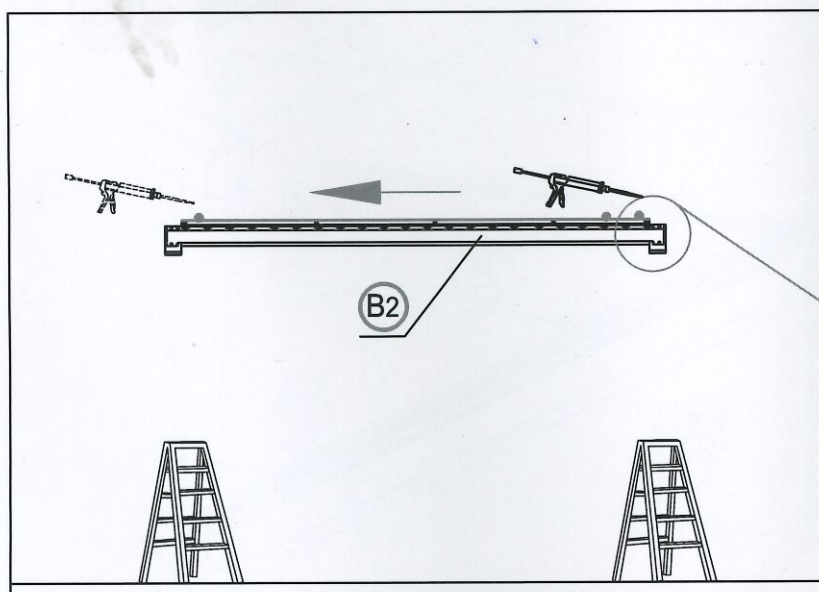

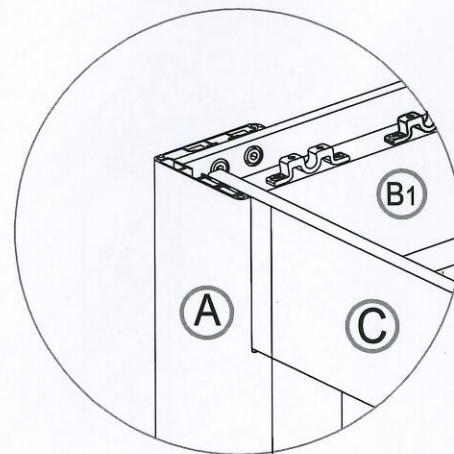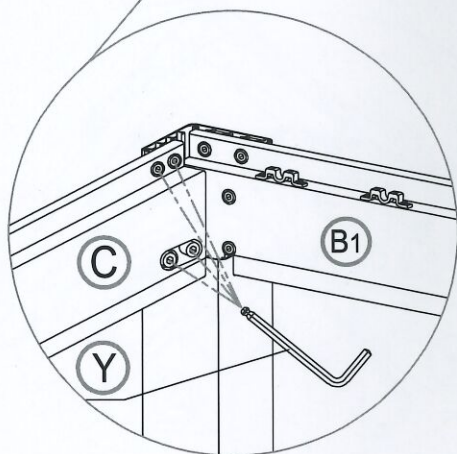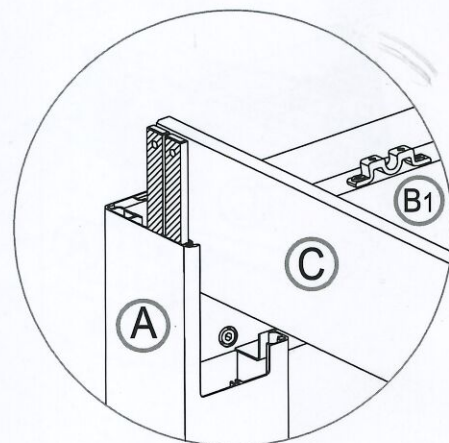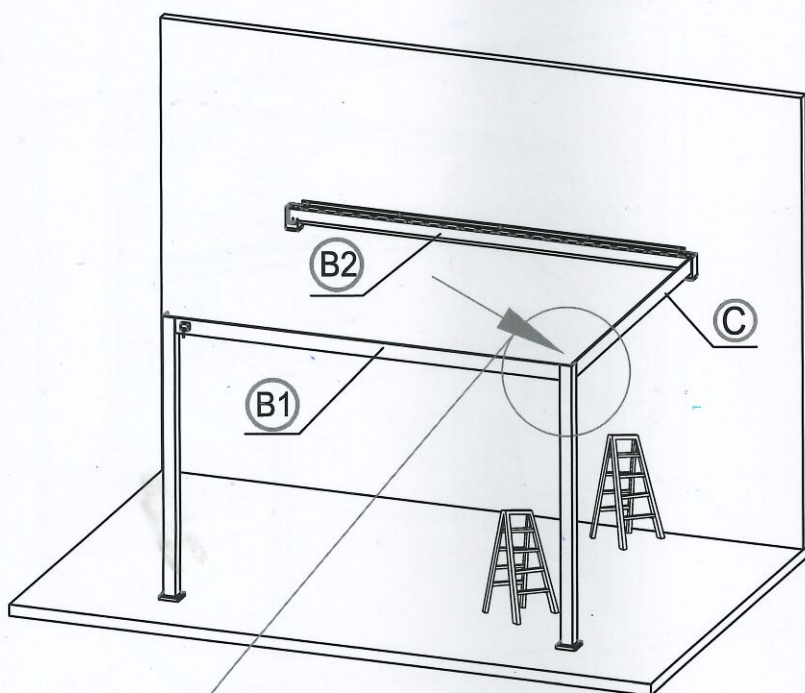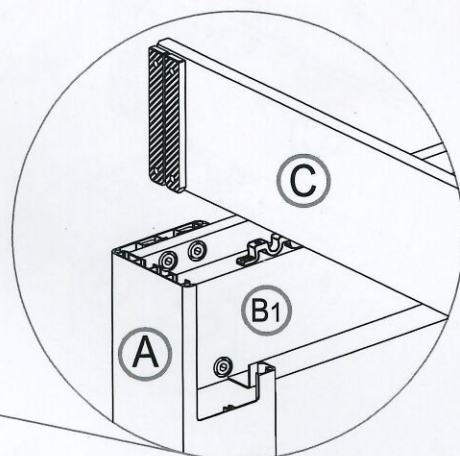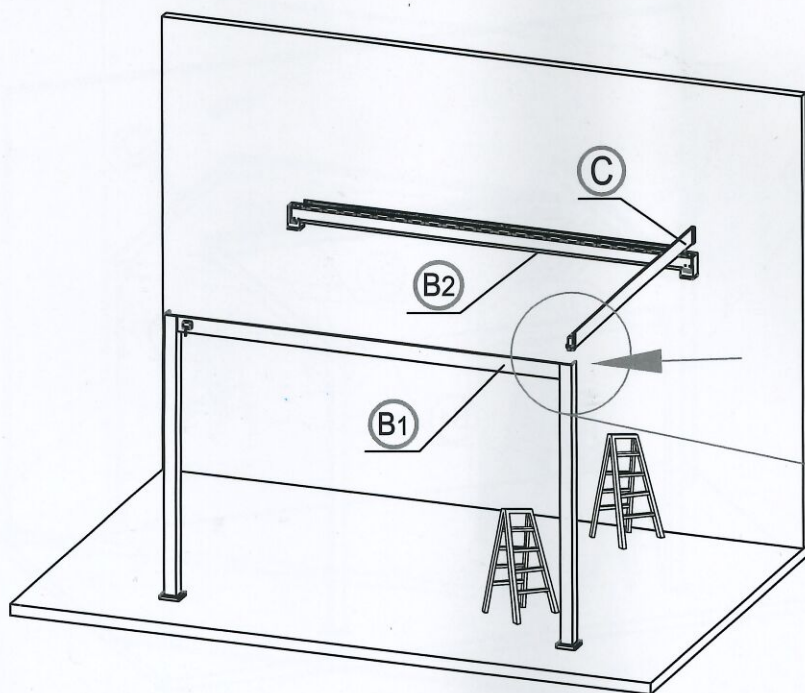


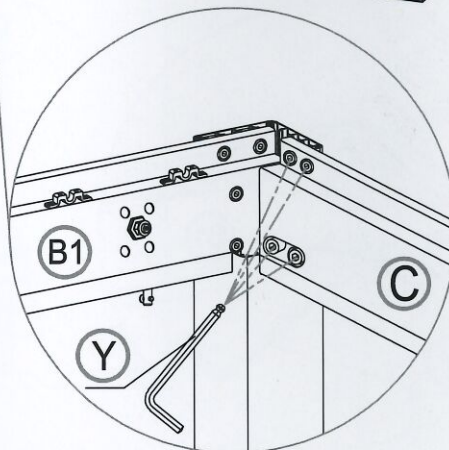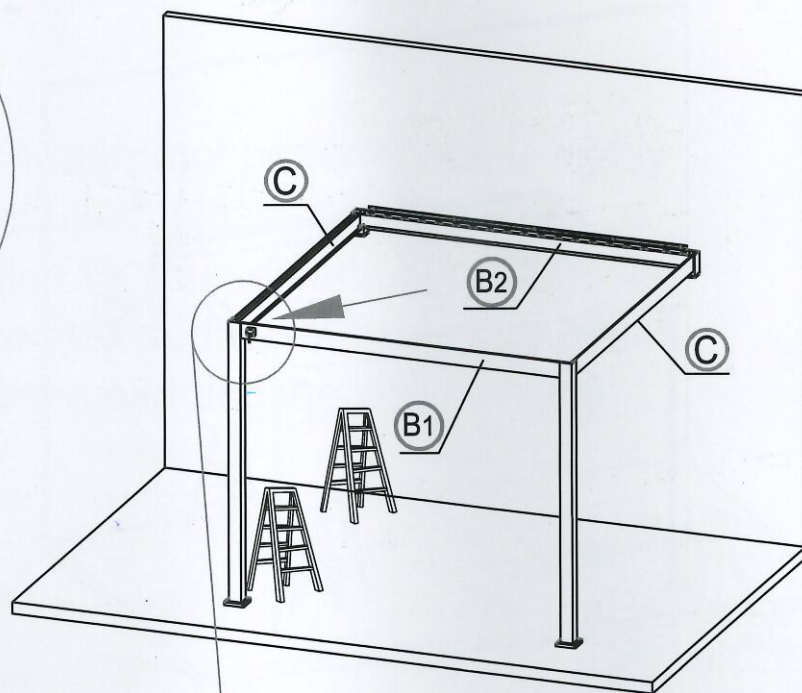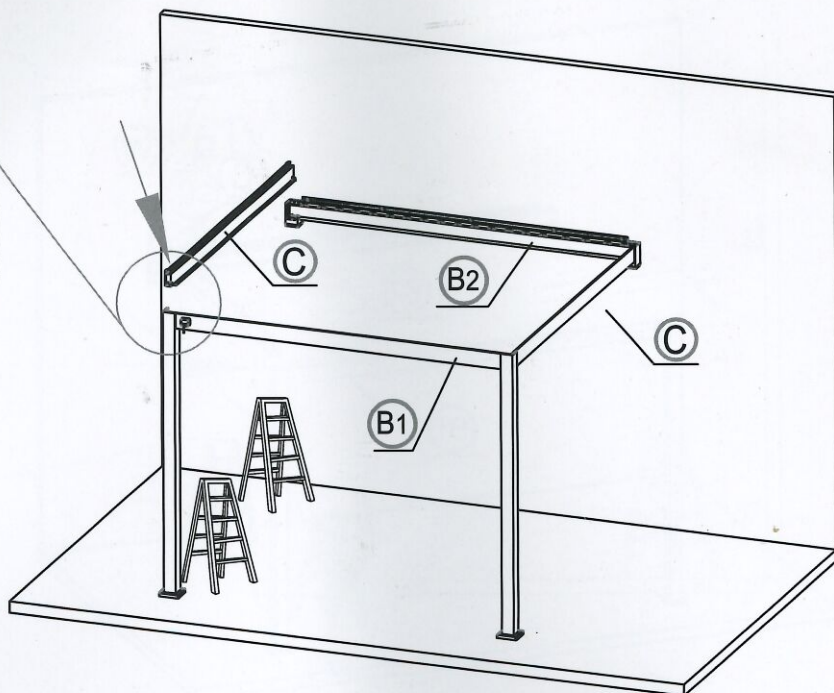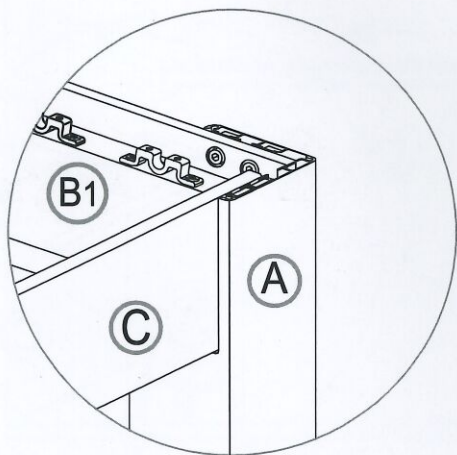
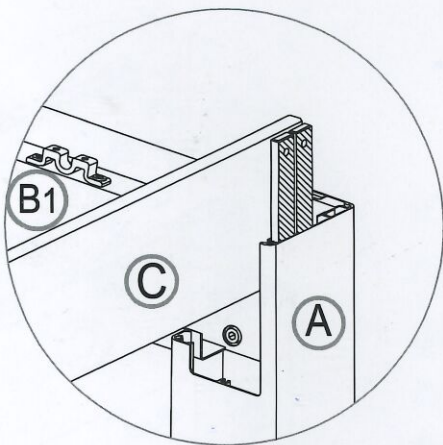

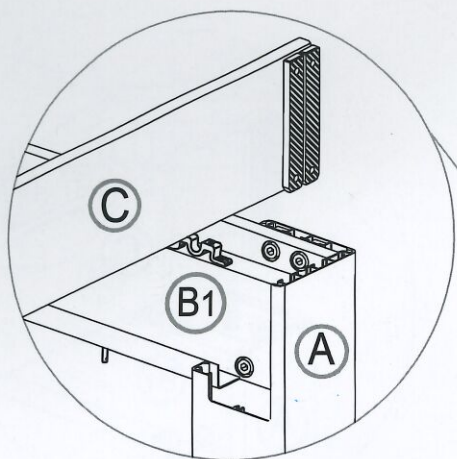


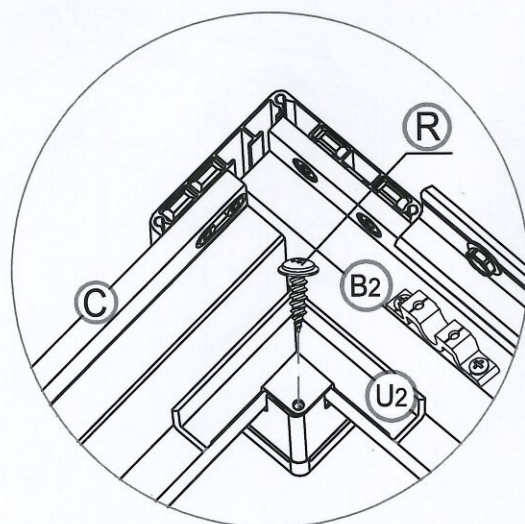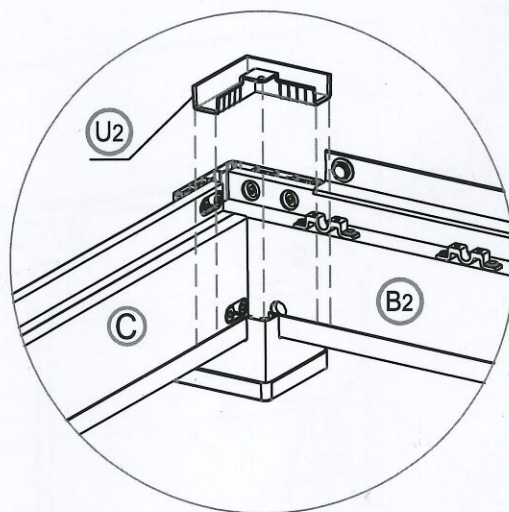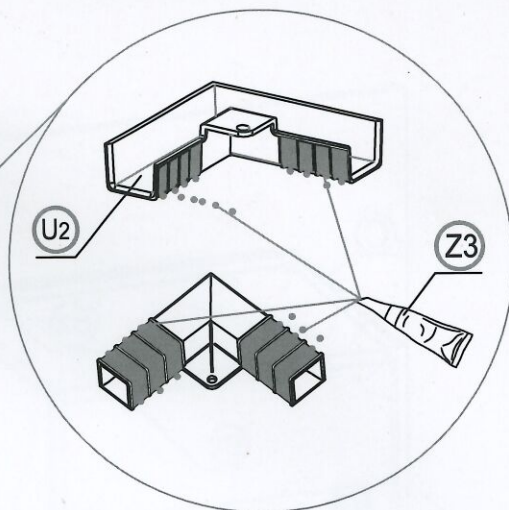
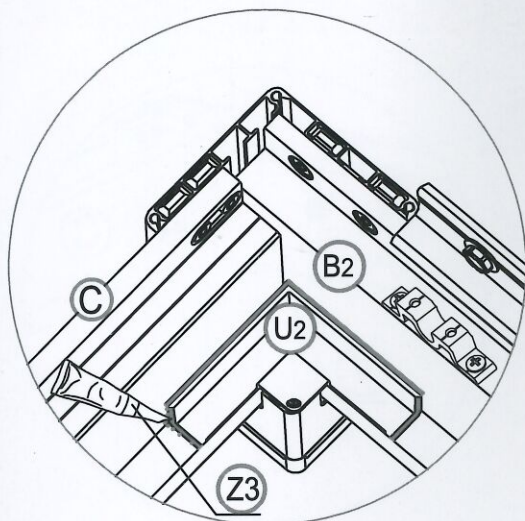
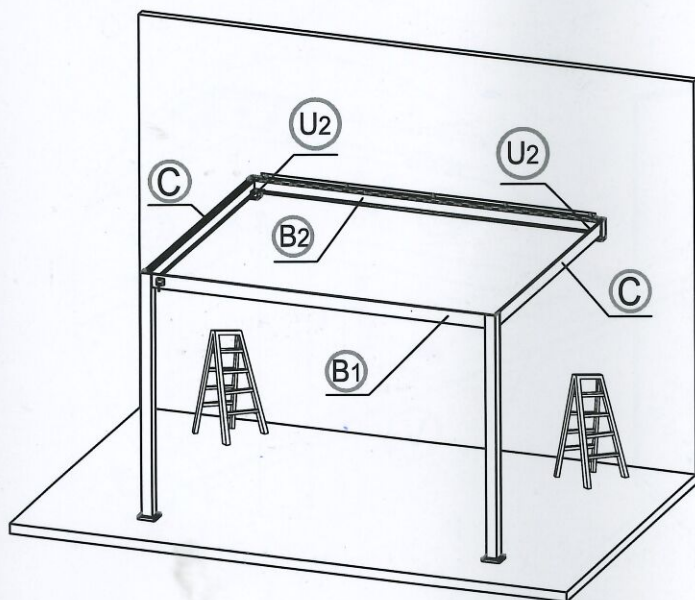
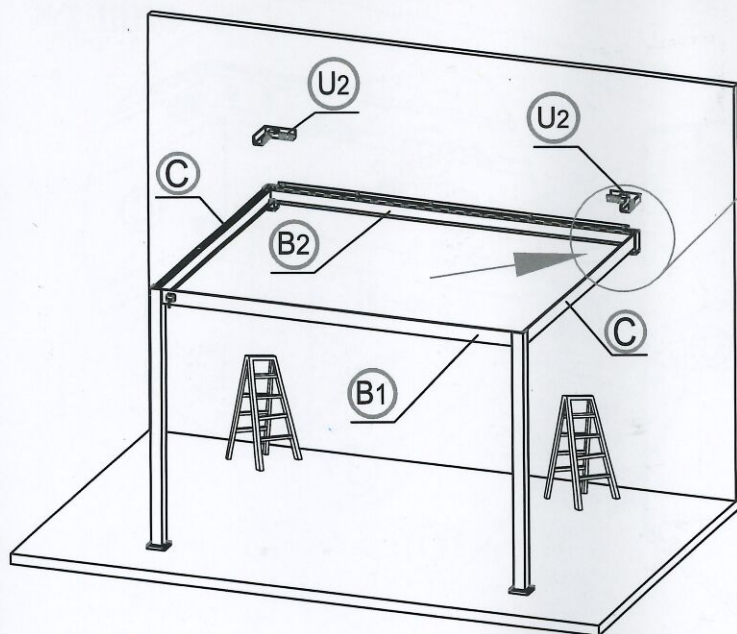


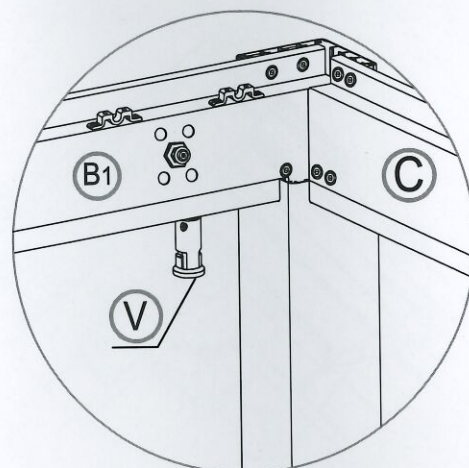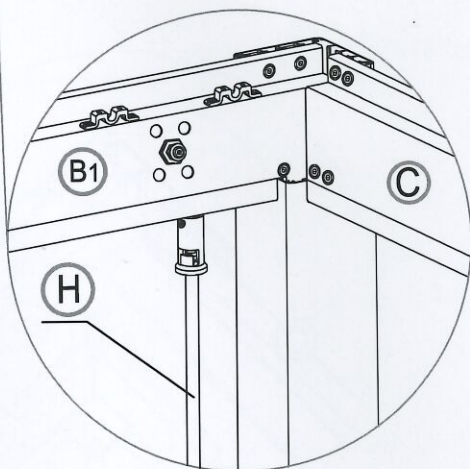

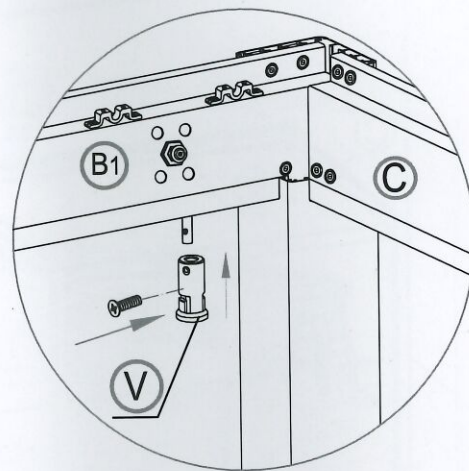
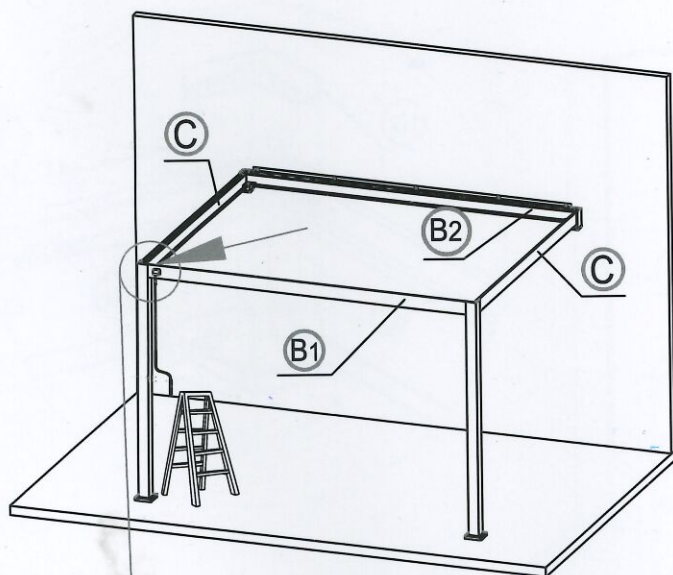

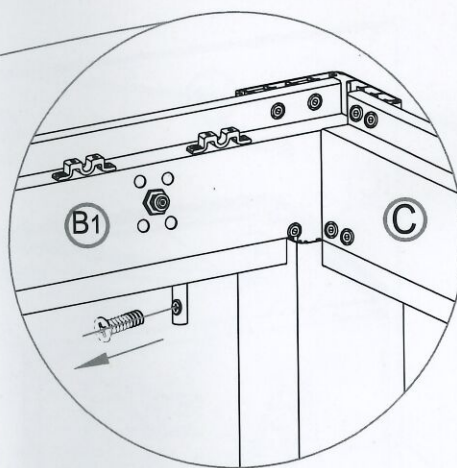
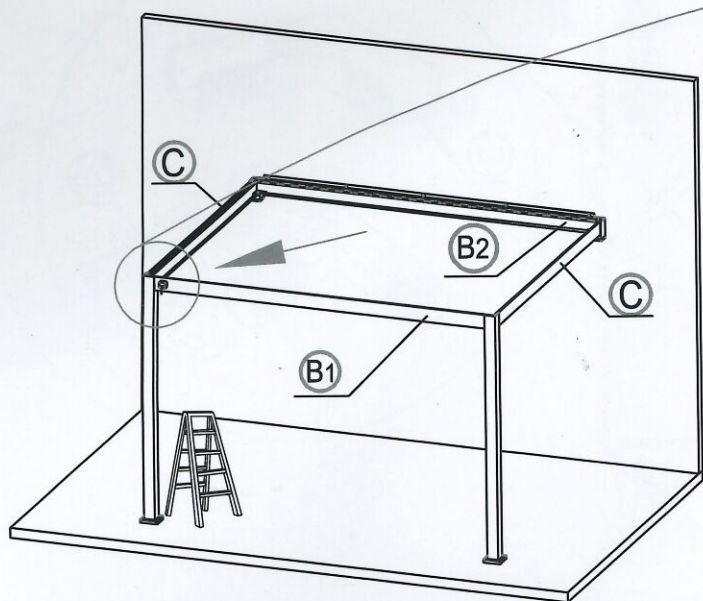


×1 time

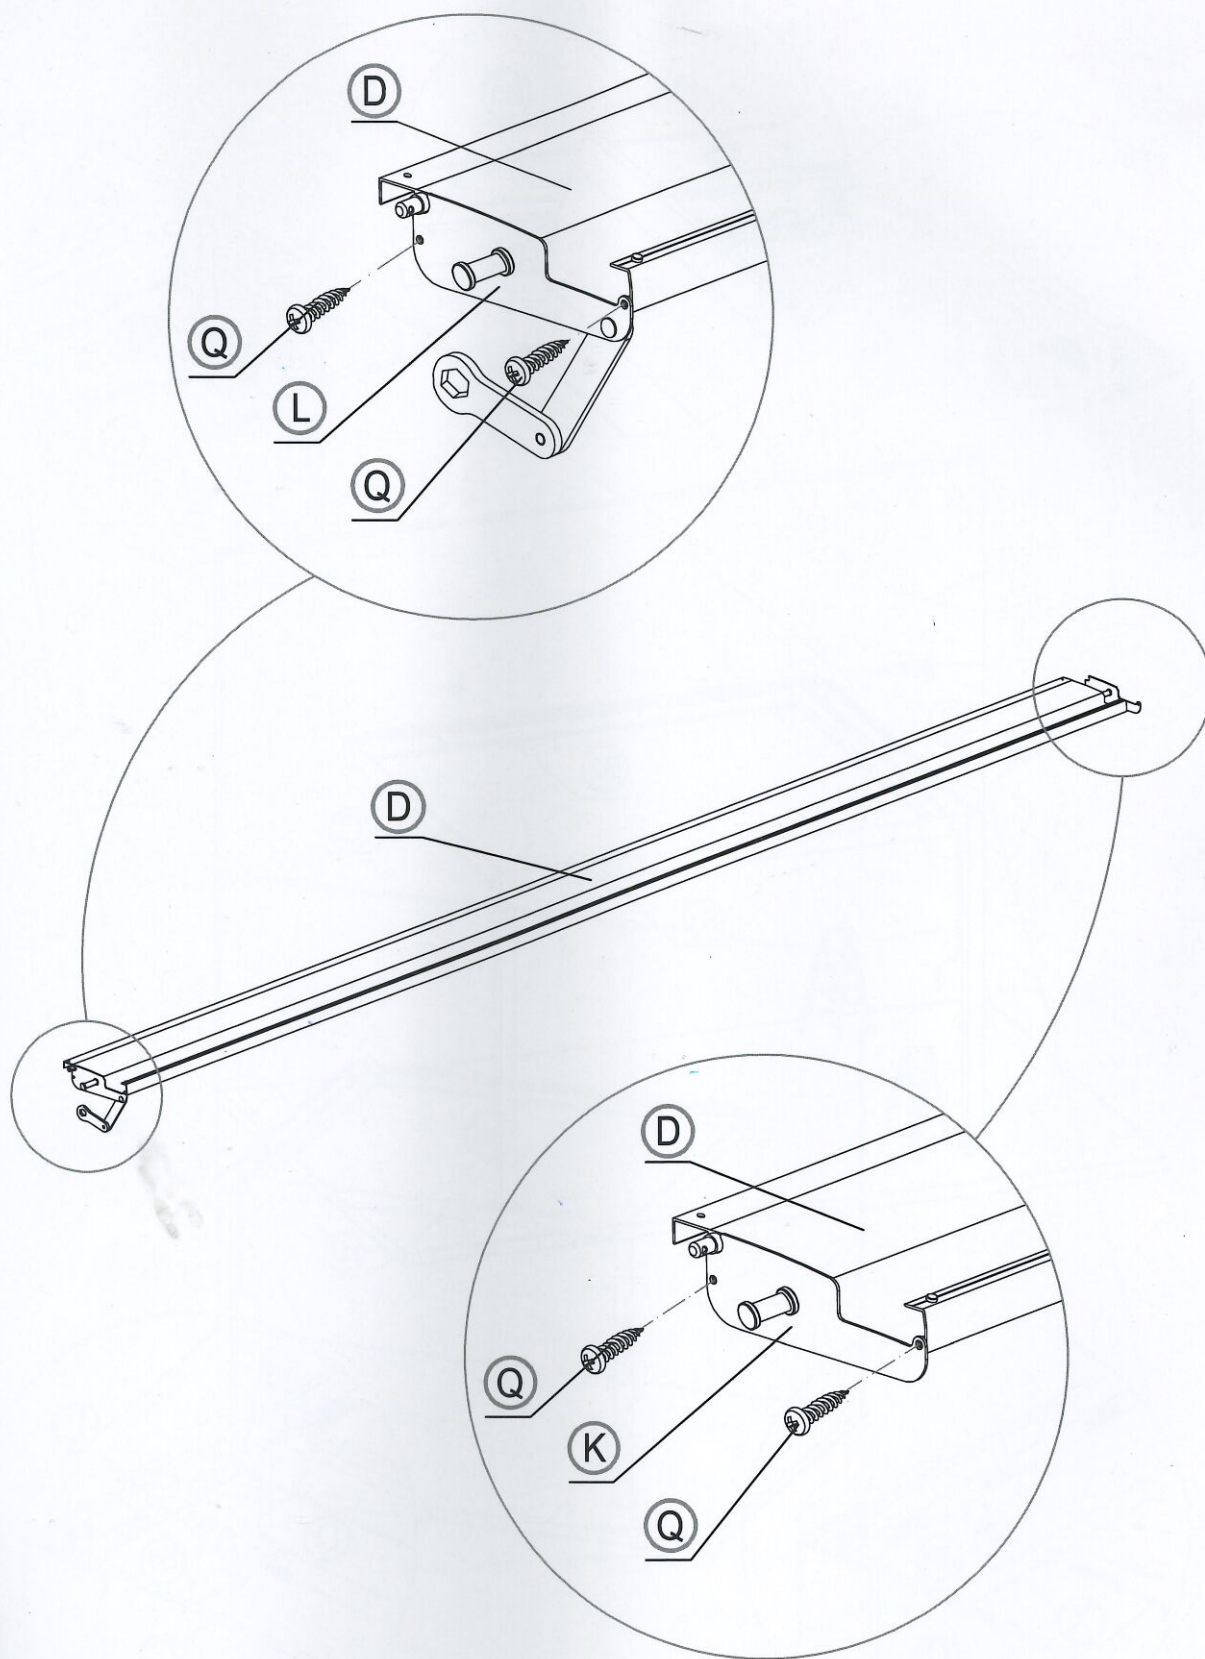





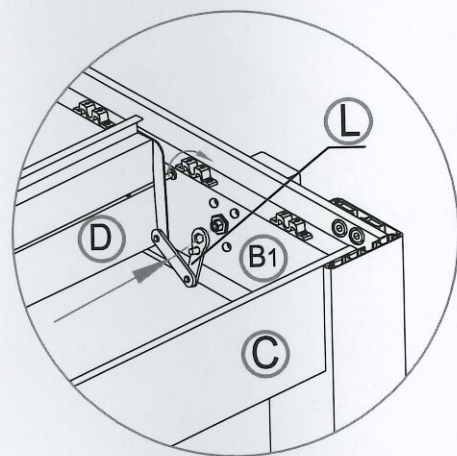

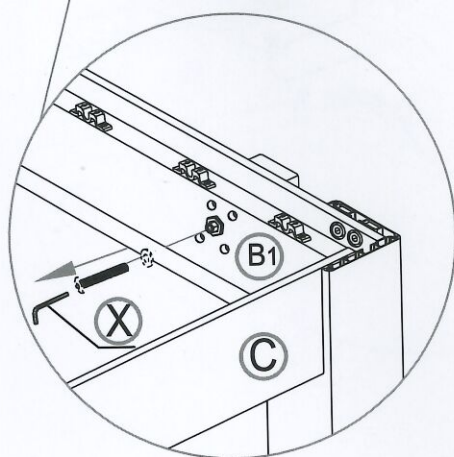
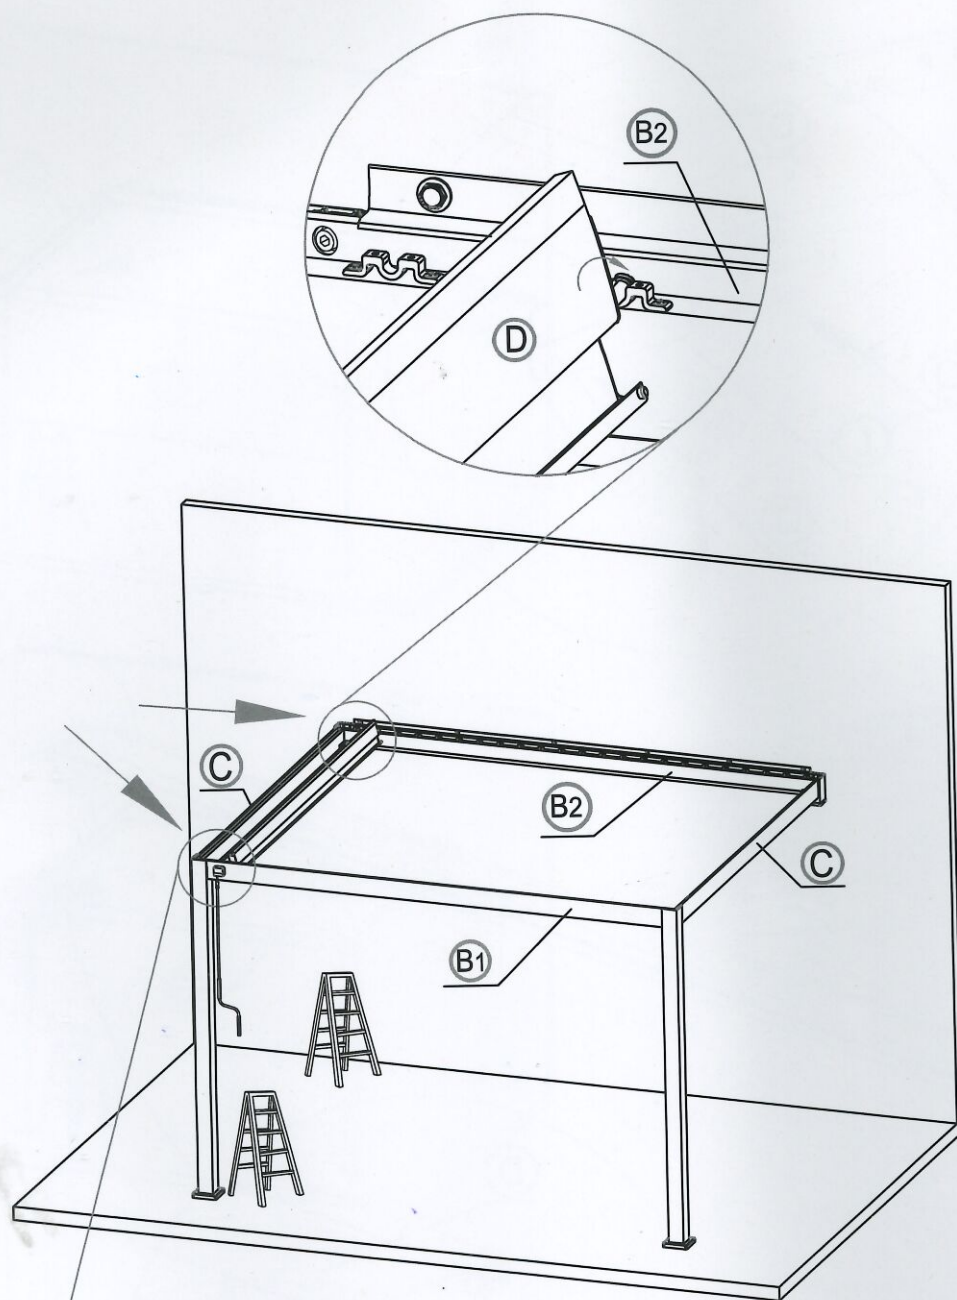


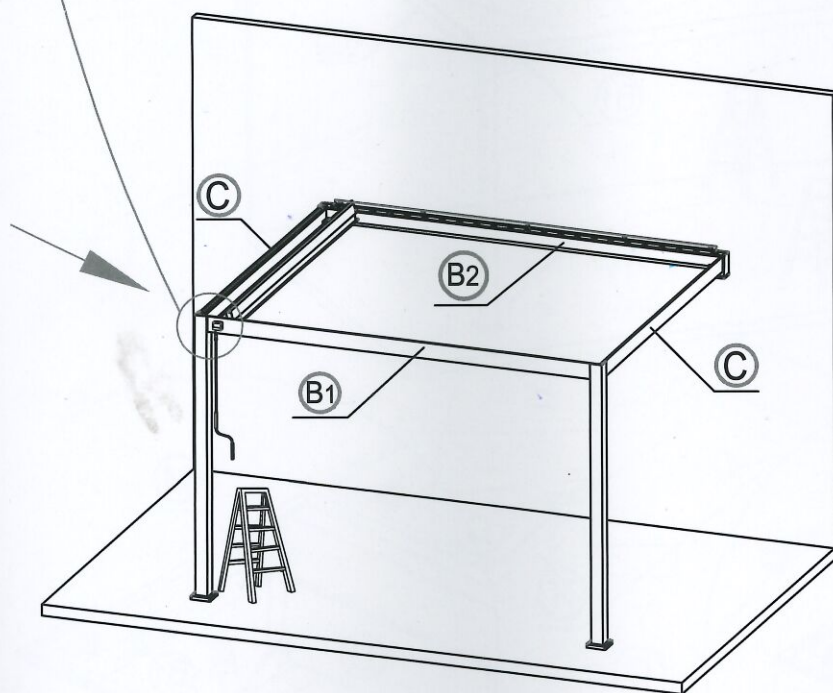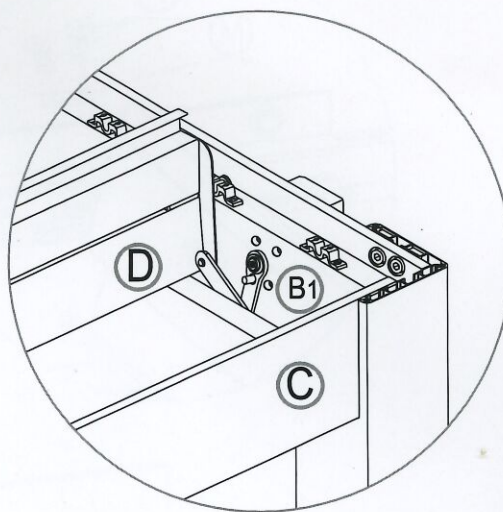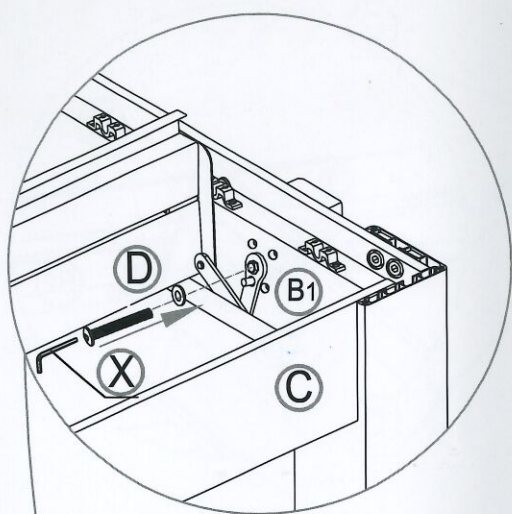

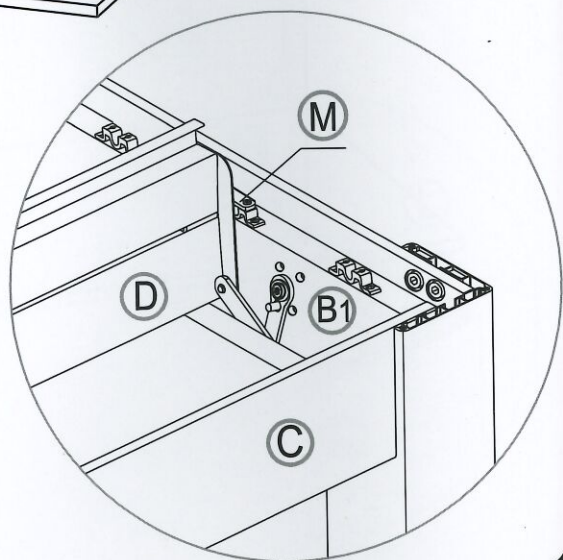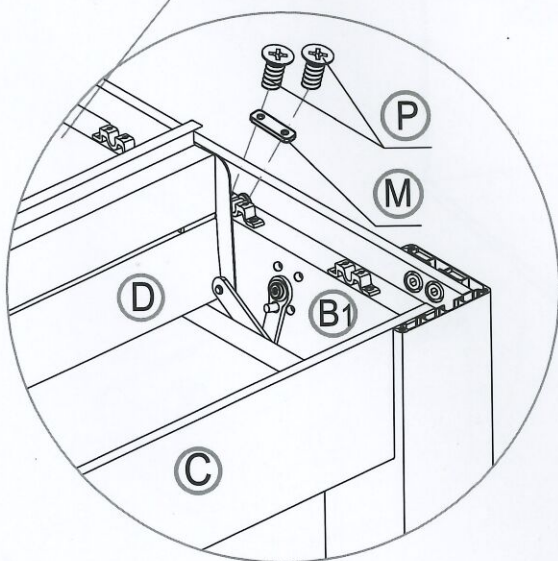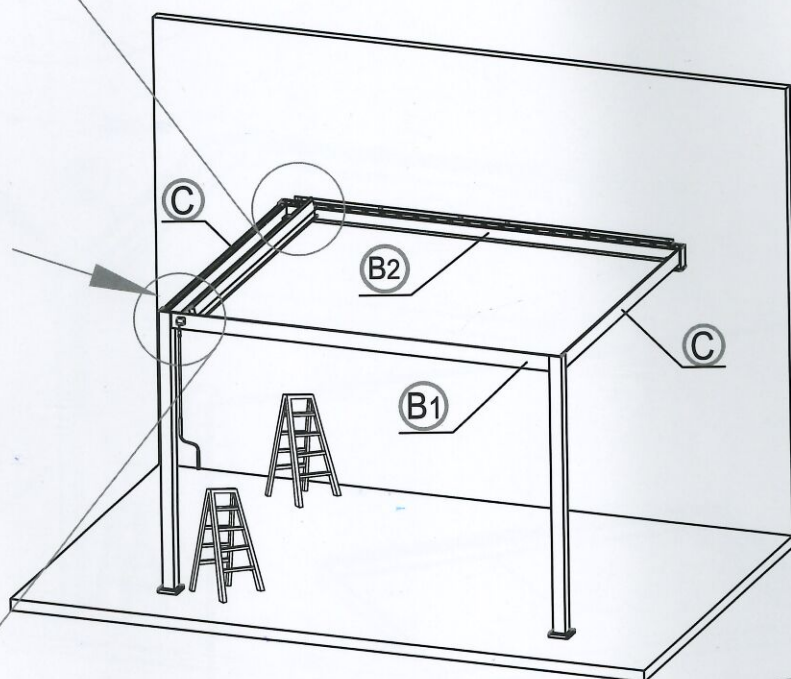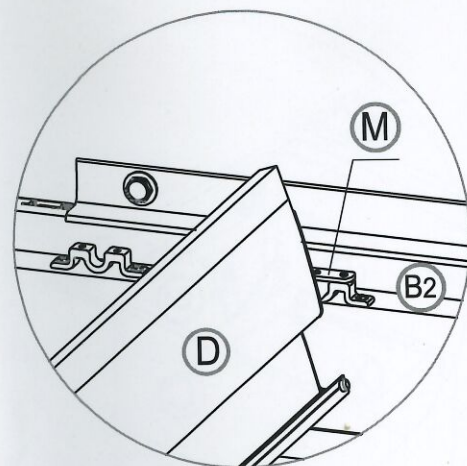
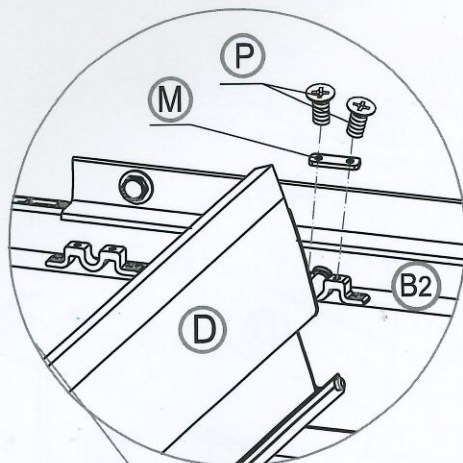









×22 times

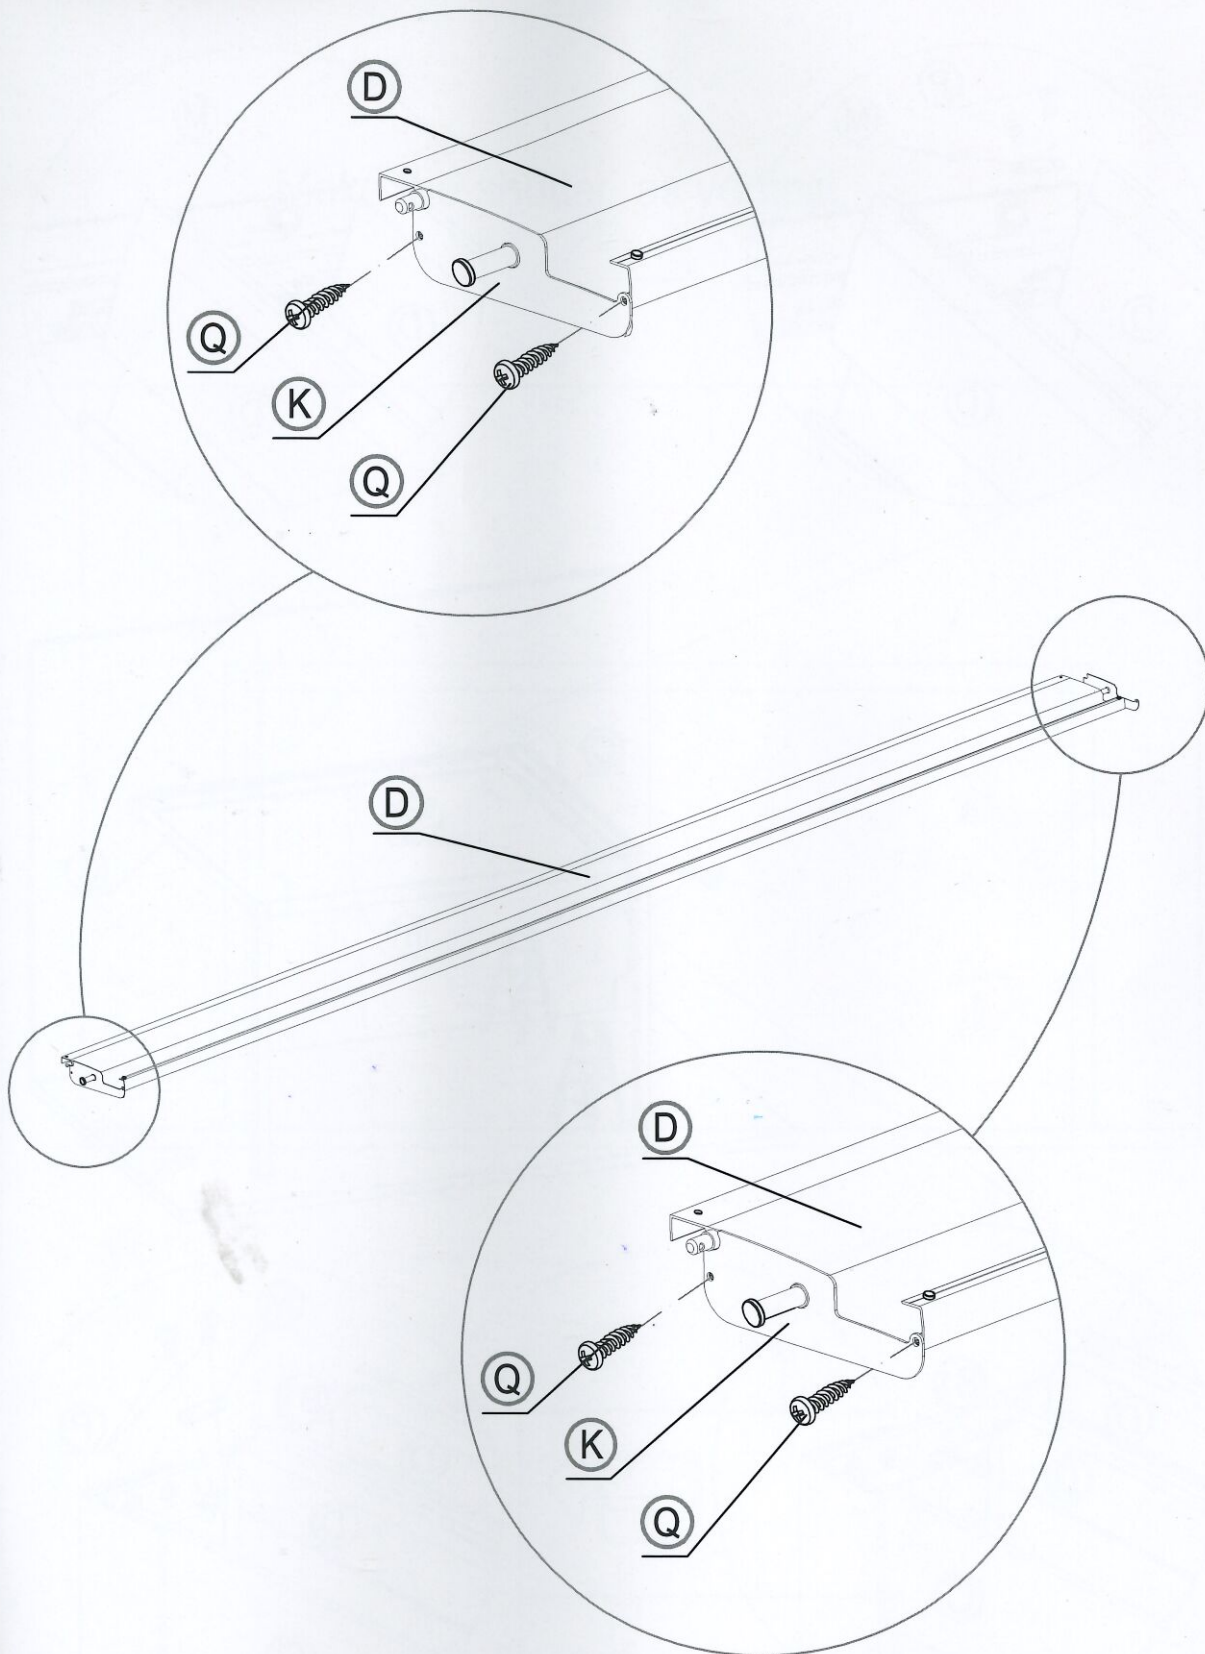

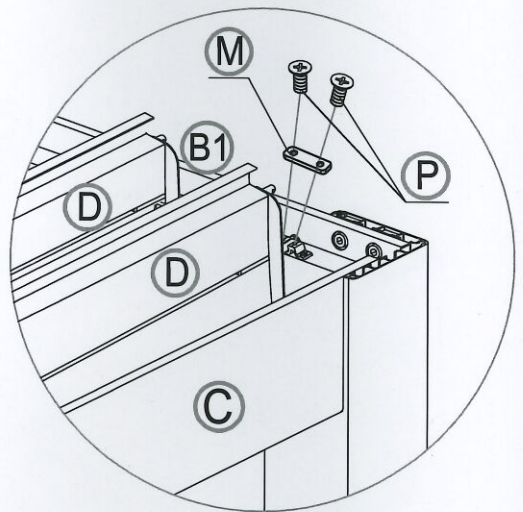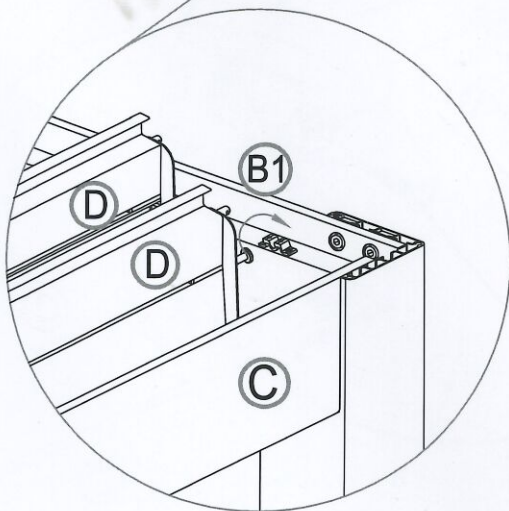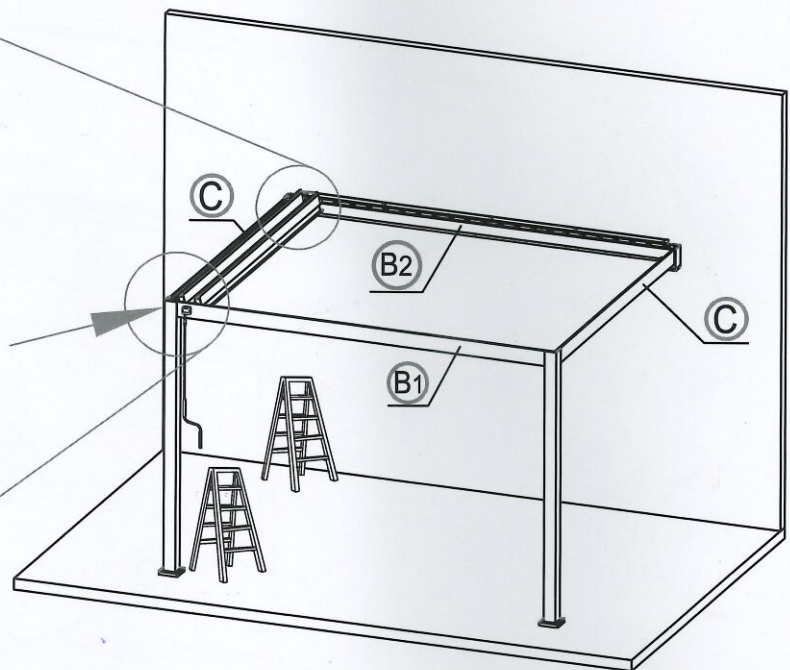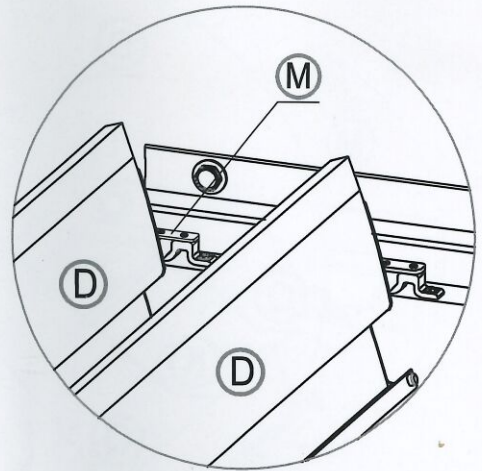
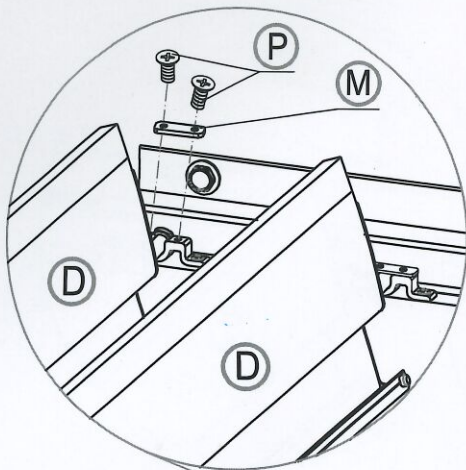


Make the shutter as vertical.

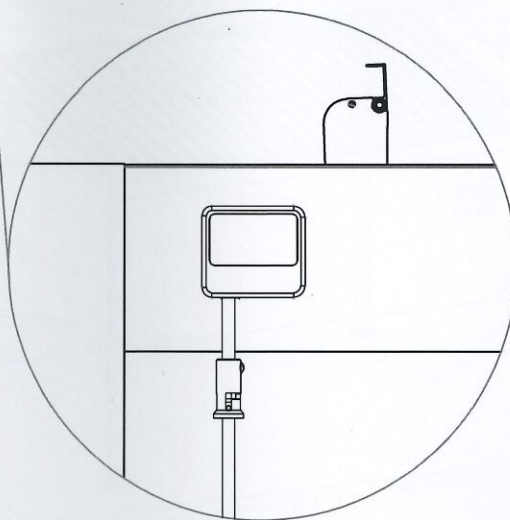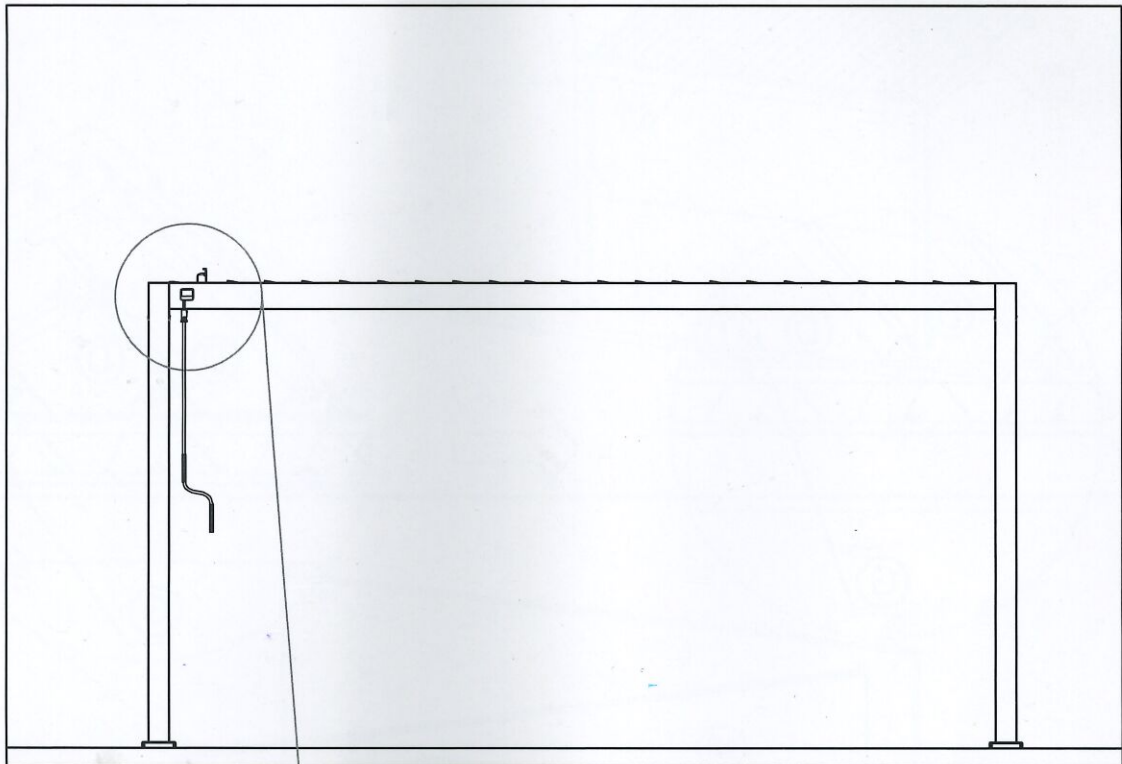

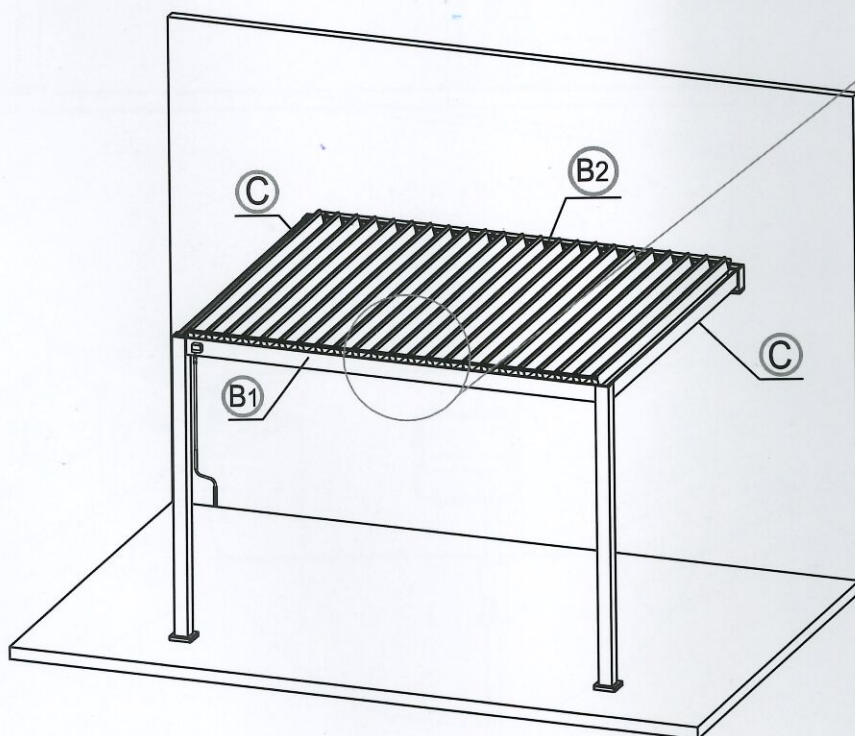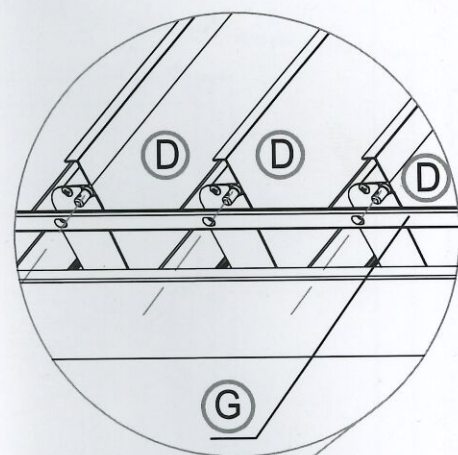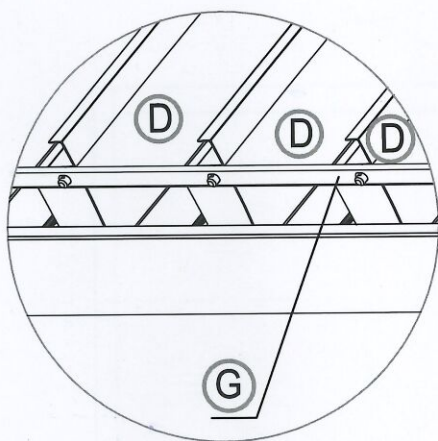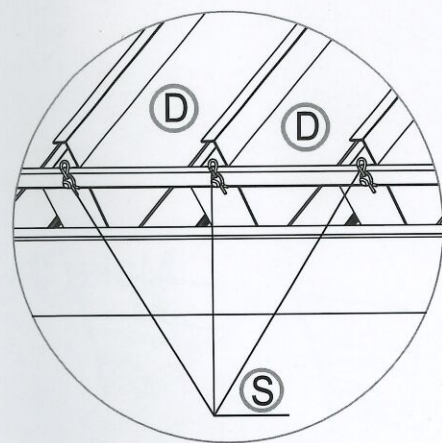
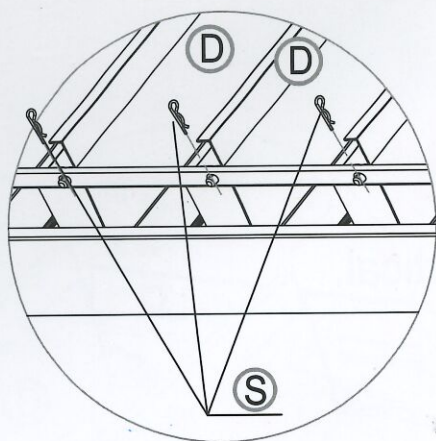


×4 times

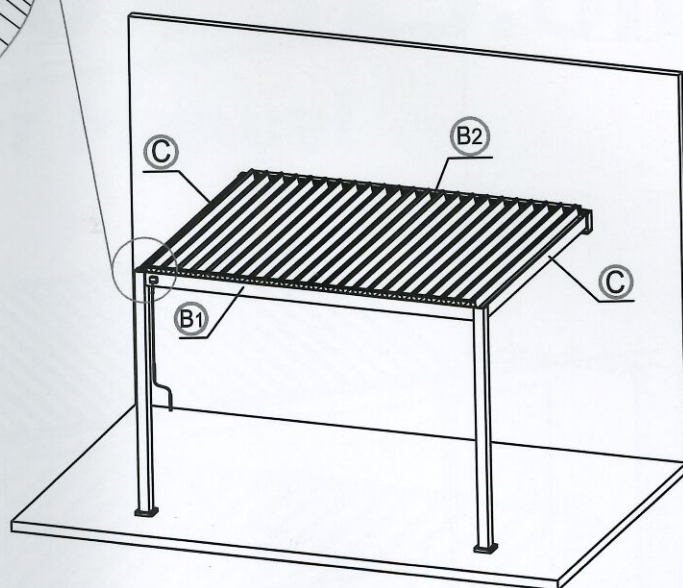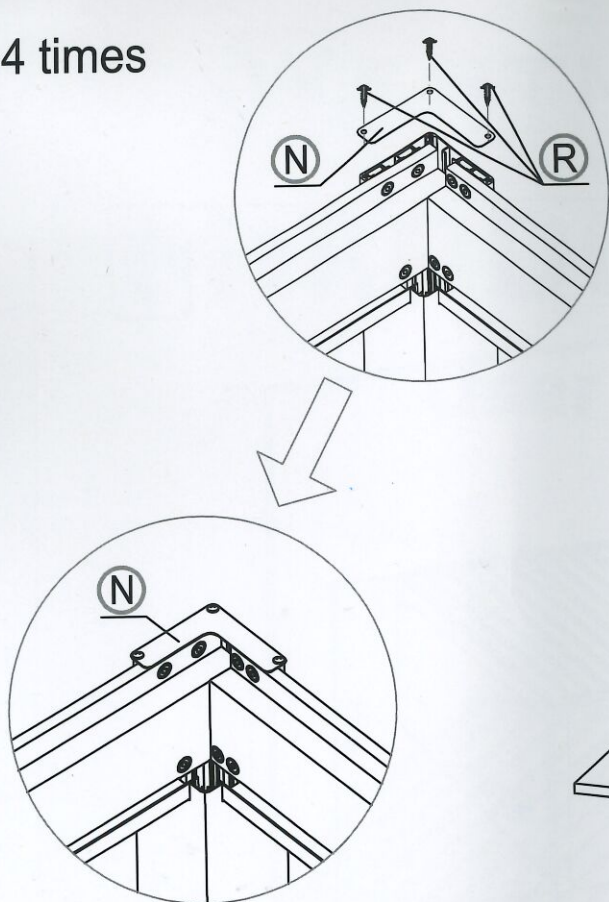

20

×2 times

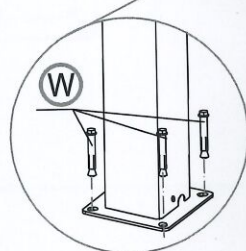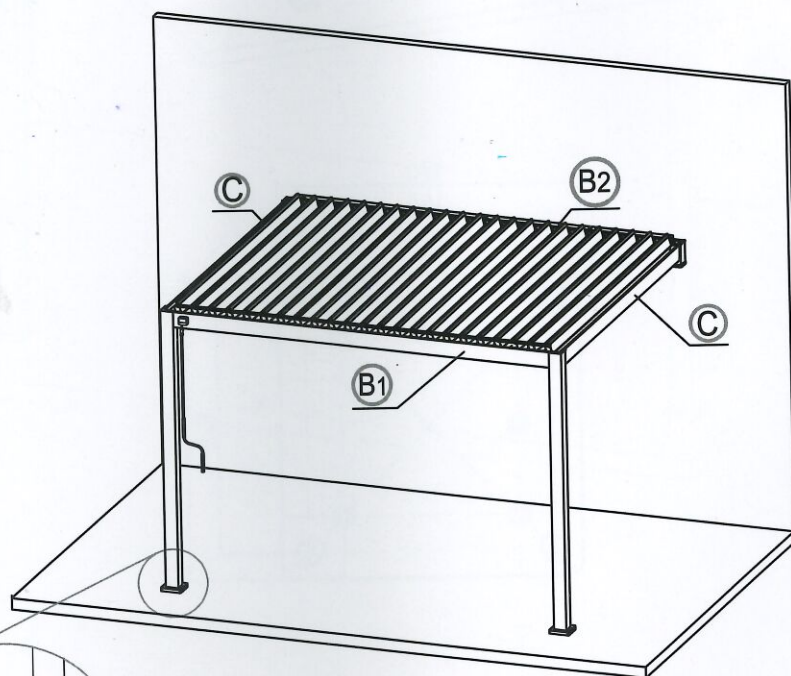

21

